




MOTOMANUAL

W375
GSM

motorola.com


HELLOMOTO

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola W375 wireless phone.

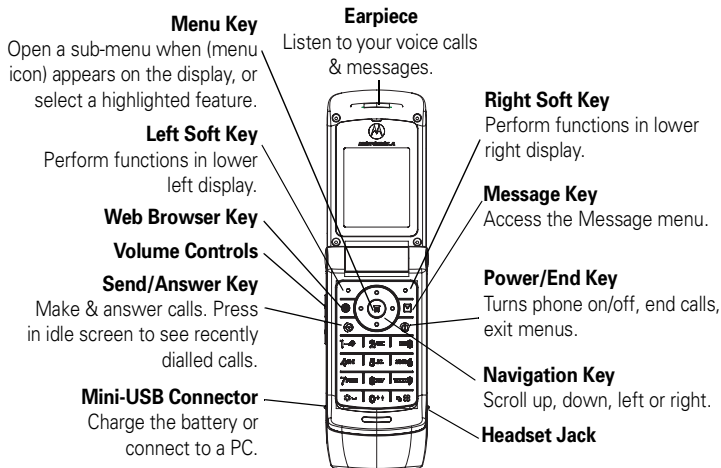

Note: The above illustration is for reference only. There may be slight differences between the appearances of handset, keys and contents of display used in the manual and those of your handset. Please refer to your handset for actuality.

check it out!

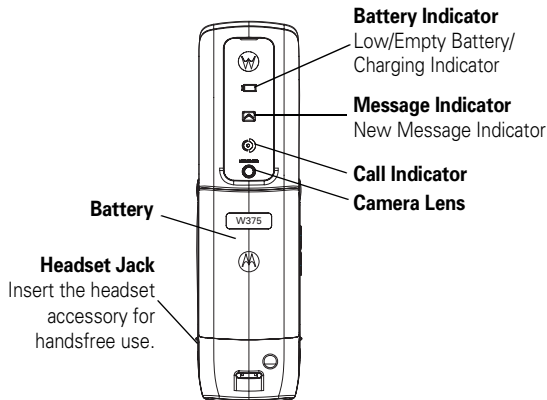

Note: The above illustration is for reference only. There may be slight differences between the appearances of handset, keys and contents of display used in this manual and those of your handset. Please refer to your handset for actuality.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

contents

check it out!	2	camera	23	answer options	42
menu map	6	use the FM radio	25	personal greetings	42
Safety Information	8	mobile usb	28	optional handsfree operation	43
Use and Care	13	basics	30	calls	44
EU Conformance	14	display	30	recent calls	44
Recycling Information	15	menus	34	redial	45
essentials	16	text entry	35	return a call	45
about this guide	16	volume	38	notepad	45
SIM card	17	navigation key	38	hold or mute a call	46
battery	17	handsfree speaker	38	call waiting	46
turn it on & off	19	codes & passwords	39	caller ID	46
make a call	20	check battery meter	39	emergency calls	47
answer a call	20	customize	40	international calls	47
your phone number	20	ring style	40	1-touch dial	47
main attractions	21	time & date	40	voicemail	48
multimedia messages	21	wallpaper	41		
chatting	23	screen saver	41		
		display appearance	41		

inserting special characters into dialing sequences	49
other features	50
advanced calling	50
contacts	52
messages	56
chat	58
web browser (wap 2.0)	58
personalising	59
call times & costs	61
handsfree operation	62
network	62
personal organizer	62
security	64
fun & games	64
SAR Data	65
WHO Information	66
index	67

Note: The function available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any questions about the handset function. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revision or changes.

menu map

main menu

	Contacts		Games • Football • Space • Crazy	* Earpiece is required for FM Radio to function ** Network and/or subscription dependant features
	Recent Calls • Received Calls • Dialed Calls • NotePad • Call Times ** • Call Cost ** • Data Times ** • Data Volumes **		WebAccess ** • Start Browser • Web Shortcut • Go to URL • Web Session • Stored Pages • History • General Setting	
	Messages ** • Create • Inbox • Draft • Outbox • Quick Notes • Voicemail • Browser Msgs • Info Services • MMS Templates		Multimedia • Camera • Pictures • Sounds • FM Radio *	The function available on this handset may vary in different regions and nations. Please contact your local customer service centers, agencies or retailers if you have any questions about the handset function. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revision or changes.
	Extras • Calculator • MyMenu • Alarm Clock • Stop Watch • Chat ** • Dialing Services ** • STK Service ** • Calendar • Lantern		Personalise • Home Screen • Main Menu • Color Setting • Greeting • Wallpaper • Screen Saver • Quick Dial **	The above gives an example of typical structure of main menu. Please refer to the handset for the actual structure.
			Settings (see next page)	

settings menu



Ring Style

- Style
- Detail



Call Divert **

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert



In Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Settings
- Backlight
- Scroll
- Language
- DTMF **
- TTY Setup **
- Master Reset
- Master Clear
- Format Additional Storage Device



Phone Status **

- My Numbers
- Active Line
- Battery Meter



Headset

- Auto Answer



Network **

- New Network
- Network Setup
- Avail. Networks
- My Network List
- Service Tone
- Call Drop Tone
- Band Selection



Security

- Phone Lock
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords



Easy Prefix **

- Auto Change
- Pref. Op



Lantern

- Lantern

* Earpiece is required for FM Radio to function

** Network and/or subscription dependant features

The function available on this handset may vary in different regions and nations. Please contact your local customer service centers, agencies or retailers if you have any questions about the handset function. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revision or changes.

The above gives an example of typical structure of main menu. Please refer to the handset for the actual structure.

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.¹

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

¹ The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:



Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Symbol	Definition
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9

CE0168

Type: MC2-41H14

Product
Approval
Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

essentials

about this guide

This guide shows how to locate a menu feature as follows:

Find it : Press  > **Recent Calls** > **Dialled Calls**

This example shows that, from the home screen, you press  to open the menu, highlight and select **Recent Calls**, then highlight and select **Dialled Calls**.

Press  to scroll to and highlight a menu feature. Press the **SELECT** key to select the highlighted menu feature.


symbols	
	This means a feature depends on the network or subscription and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.



SIM card


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and contacts entries.

Caution: Do not bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

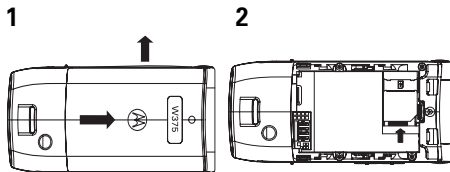

battery

battery installation

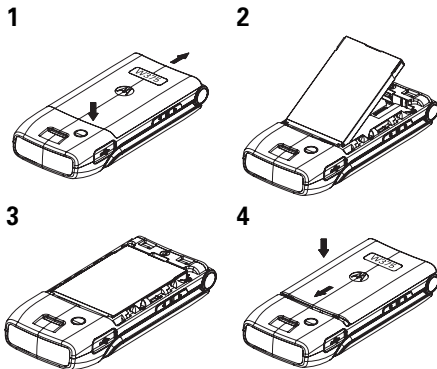


Note: If you remove the battery for a long time, the phone will ask you to reset the time and date. If you choose to cancel or ignore, the time and date will be **affected**. You can input the correct time and date by:

Find it: Press  > **Setting** > **Initial Setup** > **Time and Date**

But, if you remove the battery just for a few seconds (e.g. quickly change SIM card), the system either won't ask you to reset the time and date or if prompted, you can choose **BACK** on the time and date screen, the clock will only be slightly affected.

battery charging

Before you can use your phone, you need to completely charge the battery. New batteries are not fully charged. Plug the Mini-USB cord into your phone and an electrical outlet or a PC. Your phone displays **Charge Complete** when finished.

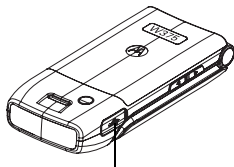

Power Connector
Insert the charger.

Tip: You cannot overcharge your battery. It will perform best after you fully charge and discharge it a few times.

New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original™ batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.



- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.

turn it on & off

To turn on your phone, press and hold  for 2 seconds. If prompted, enter your SIM card PIN code and/or unlock code.



Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. Contact your service provider.

To turn off your phone, press and hold  for 2 seconds.

make a call

Enter a phone number and press  to make a call.

To end the call, press .

answer a call

When your phone rings and/or vibrates, press  to answer.

To end the call, press .

You can also answer or end a call by pressing any key when the **Multi-key** answer option is activated.

Find it: Press  > **Settings** > **In Call Setup** > **Answer Options**

your phone number



To see your number:

Press  > **Settings** > **Phone Status** > **My Numbers**
or Press  > 

To store or edit your name and number on your SIM card, press the **VIEW** key while displaying it. If you don't know your phone number, contact your service provider.

main attractions

multimedia messages

For more message features, see page 56.

send a multimedia message



A *Multimedia Messaging Service* (MMS) message contains pages with text and media objects (including photos, pictures, animations, or sounds). You can send the multimedia message to other phones with MMS.

Find it: Press  > **Messages** > **Create** > **SMS/EMS**, **MMS** or **MMS Templates**

Note: The **MMS templates** can't be downloaded or expanded. You can only use the default templates.

- 1 Press keypad keys to enter text on the page. For details about text entry, see page 35.

To insert a **picture, sound, or other object** on the page, press **INSERT** or  > **Insert**. Select the file type and the file.

To insert another slide in the message, enter text objects on the current page and press  > **Insert** > **Add Slide**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **OK**.

- 3 Choose one or more people for **Send To**.

To select a **contacts entry**, highlight the entry, and press **ADD**. Repeat to add other **Contacts** entries.

To **enter** a new number, highlight **[One Time Entry]** and press **SELECT**.

To **enter and store** a new number, highlight **[New Entry] > Number / Email** and press **SELECT**. The entry can be saved in your SIM card or to your phone.

- 4 When you finish entering numbers/addresses, press **DONE**. Your phone displays the message fields.

To enter a **subject** for the message, highlight **Subject** and press **CHANGE**.

To request a **delivery receipt** for the message, highlight **Receipt** and press **CHANGE**, then press **ADD**.

- 5 To send the message, press **SEND**.

To **cancel or save** the message as a **Draft**, press  > **Save to Drafts**.

- 6 To **cancel** the message, go to **Outbox**. If the message is still sending, highlight the message and press  > **Cancel**.

receive a multimedia message



When you receive a multimedia message, your phone sounds an alert and displays **New Message** with a message indicator, such as .

Press the **READ** key to open the message.

If a multimedia message contains media objects:

- photos, pictures, and animations will display as you read the message.
- sound files will play when its slide bar displays.

chatting




Select **Chat** from the **Extras** menu to keep in touch with friends. You can save time by inserting a common phrase, such as **In a meeting now** or **Take Care**. Press **NEW > Msg: > INSERT**.

camera

To activate your phone's camera using the menu system:

Find it: Press  > **Multimedia > Camera**

The active viewfinder image appears on your display.

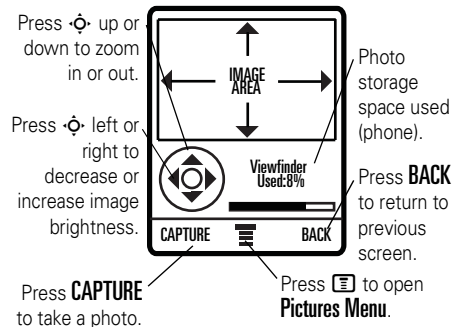

Point the camera lens at the photo subject, then:

- 1 Press **CAPTURE** to take a photo.
- 2 Press **STORE** to view storage options. If you choose to keep the photo, continue to step 4.
- 3 Press **DISCARD** to delete the photo and return to active viewfinder.
- 4 Scroll to **Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver** or **Apply as Contacts Entry** and press **SELECT**.

Note: If the screen flickers when taking a picture, you may need to select an alternative frequency for the **Flicker** setting. For example, if the **Flicker** setting is currently 50Hz, switch to 60Hz, and try to take the picture again.

Find it: Press  > **Multimedia** > **Camera** >  > **Picture Setup** > **Flicker**

From the active viewfinder, you can press  to enter the **Pictures Menu**:

option
Go to Pictures Go to the picture library.
Auto-Timed Capture Set the camera to take a photo automatically after counting down 5 or 10 seconds.
Picture Setup Adjust the picture settings. The settings include Lighting Conditions , Special Effect , Exposure , Resolution , Shutter Tone , Image Quality , and Flicker .
View Free Space Check used and available memory.

After **Capture**, you can choose to **Store** your picture. Store options include:

option
Send in Message An MMS message will be initiated with the captured picture. You can edit the MMS message and send it with the captured picture. You can also add a voice note.
Store Only The captured picture will be stored in Pictures .
Apply as Wallpaper Your picture will be applied as Wallpaper.
Apply as Screen Saver Your picture will be applied as the Screen Saver
Apply as Contacts Entry Your picture will be saved in the Contacts .


use the FM radio

You can listen to and program up to nine of your favorite FM radio stations.

turn on the FM radio

Find it: Press  > **Multimedia** > **FM Radio**

The FM radio will automatically tune in the lowest available frequency when you use it for the first time. After that, it will tune in the frequency last used. Press  up and down or use the side volume key to increase or decrease the volume.

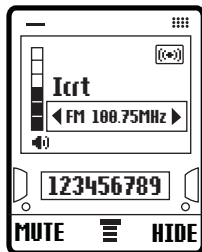

Press **Mute** to make the output volume silent.

Note: The earpiece must be inserted into the phone for the FM radio to function. If you try to turn it on without inserting the earpiece, your phone will display **Please Insert The Earpiece**.

Note: The headset also acts as an antenna, so the FM Radio receiver performance is dependent on the type of headset device connected. If a non-Motorola 3.5 mm headset is connected to the phone through the adapter (2.5 - 3.5 mm), or the headset is curled up or kinked, performance may be affected.

Note: In order for the FM Radio to play when the flip is closed, you must **HIDE** the FM Radio. Flip off or press **END** key also **HIDE** the FM radio.

tune the FM radio

- 1 Press  > **Multimedia** and scroll to FM radio.
- 2 Press  or  left or right to increase or decrease the frequency. Each keypress will increase or decrease the frequency by 0.05 MHz.
- 3 Press and hold  or  left or right to activate the scanning feature. The FM radio will scan to the next usable frequency. You can continue scanning by pressing  or  again. Press  > **Set Frequency** to save the channel.

use the radio presets

You can store up to nine preset radio stations.

set the radio presets

- 1 Tune in the desired frequency by pressing  left or right.
- 2 Press and hold number keys to save that number as the preset.

select a radio preset

Press number keys to select the corresponding radio preset.

FM radio selection

You can manually set the radio frequency and display or edit the frequency list.

set frequency



- 1 Press  and scroll to **Set Frequency**. Press **SELECT**.
- 2 Use the number keys to enter the desired frequency. Press  to enter a decimal point. Second decimal number can only be 0 or 5.
- 3 Press **OK**.

display or edit the channel list

- 1 Press  and scroll to **Station Presets**. Press **SELECT**.
- 2 Press the keypad keys to select the desired channel or press  to scroll to the desired channel, then press  > **Edit**.
- 3 Use the number keys to enter the **Friendly Name** and **Frequency**.
- 4 Press **OK**.

play FM radio through speaker or headset

Press  and scroll to **Speaker**, then press **SELECT**. To play the FM Radio through the headset, press  and scroll to **Earpiece**, then press **SELECT**.

Note: The earpiece must be inserted into the phone for the FM radio to play through the Speaker.

turn off FM radio

To turn off the radio, press  > **Multimedia** > **FM Radio** >  > **FM Radio Off**.

mobile usb

Your phone can be USB charged by connecting to a PC. It can also upload and download files via connection to a PC or other USB device.

Note: WIN 95 and higher are supported for the Mobile USB. Mac is not supported.

To use this feature:

- 1 Insert the USB cable into the USB port on the left side of the phone. The phone will display **Connect phone as storage device?**
- 2 Press **Yes** to use phone as a portable USB storage device.

Note: When the phone is in this mass storage mode, it cannot make or receive calls, or perform any other functions. Disconnecting will resume normal operation.

or

Press **No** to enable USB charge if the connected device is a PC.

Downloaded files can be viewed by pressing

 > **Multimedia** > **Pictures** or **Sounds**
> **Additional Storage Device.**

Your phone has 500kb of memory for mobile USB storage. The downloadable media limit is 100kb. Size limit to send and receive pictures is 100kb.

Note: Files in additional storage space can be deleted. Files stored in the Preloaded and downloaded media space cannot be deleted.

Note: The home screen must be displayed when connecting, and the phone flip must be

open when using the phone as a USB storage device.


basics

See page 1 for a basic phone diagram.

display

The *home screen* displays when you turn on the phone. To dial a number from the home screen, press the number keys and .

Note: Your home screen may look different from the one on this page, depending on your service provider.

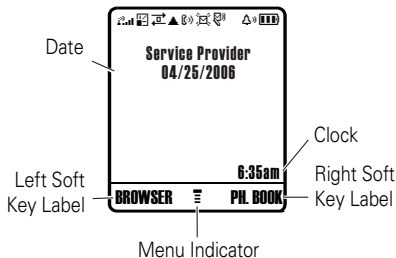


When  is displayed, you can press  to open the menu. Labels at the bottom corners of the display show the current soft key functions. Press the left or right soft key to perform the function indicated by the label. For soft key locations, see page 1.

In the home screen, press  up, down, left, or right to open basic menu features. You can choose to show or hide home screen display icons.

Find it: Press  > **Personalise** > **Home Screen** > **Home Keys** > **Icons**

status indicators

Status indicators may be shown at the top of the home screen:

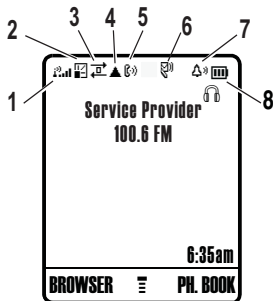

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You cannot make or receive calls when  displays.

2 GPRS Indicator – Shows when your phone is using a high-speed GPRS network connection. Indicators show **PDP context active**  or **packet data available** . 

3 Data Indicator – Shows connection status.

 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call

 = unsecure CSD call

4 Roam Indicator – Shows when your phone is seeking or using a network outside of your home network. Indicator shows ▲.



5 Active Line Indicator – Shows  to indicate an active call, or  to indicate when call diverting is on. Indicators for dual phone lines (requires SIM card for 2 phone lines) can include:



 = line 1 active  = line 2 active

 = line 1 active, call divert on  = line 2 active, call divert on

6 Message Indicator – Shows when you receive a new message. Indicators can include:



 = text message  = voicemail message

 = voicemail & text message  = active chat session

7 Ring Style Indicator – Shows the ring style setting.

 = Loud Ring  = Vibrate then Ring


 = Soft Ring  = Silent

 = Vibrate  = Vibrate & Ring

8 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low/Empty/Charging Battery**.

status icons

The status icons show the status of incoming calls, messages, and the battery.

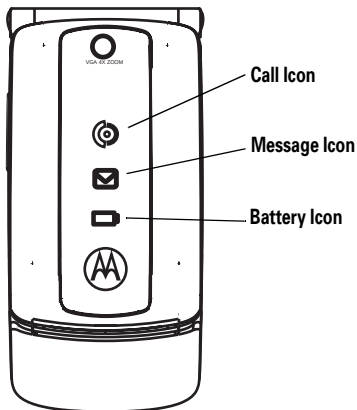

alert/icon



call icon

Icon rapidly flashes green for incoming calls from a known caller, and slowly flashes green for 30 minutes when there is a missed call from a known caller.

Icon rapidly flashes orange for incoming calls from an unknown caller, and slowly flashes orange for 30 minutes when there is a missed call from an unknown caller.



message icon

Icon flashes blue for 30 minutes when there is a new text or voice message.




battery icon

Icon flashes orange when the battery power is low, and is continually lit when the battery is charging.

Note: The Battery Icon cannot be turned off. You can turn off the status icons. Press  **Settings > Initial Setup > Status Indicator > Off.**

menus

From the home screen, press  to enter the main menu.

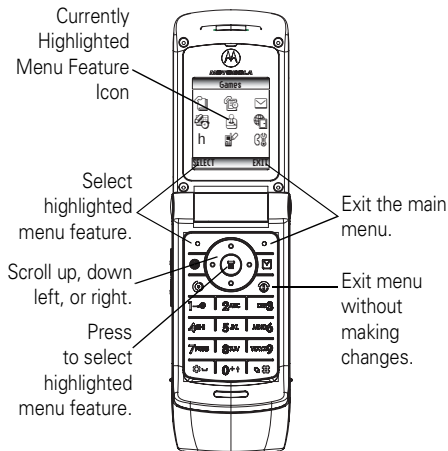


The following menu icons may be available, depending on your service provider and service subscription options.

menu features

 Contacts	 Web Access
 Recent Calls	 Multimedia
 Messages	 Personalise
 Extras	 Settings
 Games	

select a feature option


Some features require you to select an option from a list.

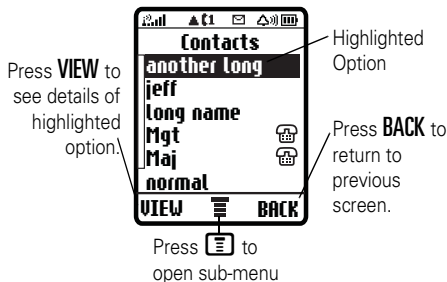

- Press  up or down to highlight the option you want.
- In a numbered list, press a number key to highlight an option.
- In an alphabetized list, press a key repeatedly to cycle through the letters and highlight the closest matching option on the list.
- When an option has a list of possible settings, press  left or right to select the setting.
- When an option has a list of possible numeric values, press a number key to set the value.

text entry

Some features let you enter text.

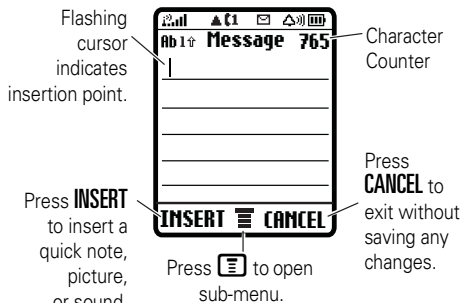

choosing a text entry method

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press **[#]** in any text entry screen to select one of the following entry methods:

Primary	The primary text entry method (see below to set).
Numeric	Enter numbers only (see page 56).
Symbol	Enter symbols only (see page 56).

set up a text entry mode

To set your **Primary** and **Secondary** text entry modes, press **[≡] > Entry Setup** in a text entry view and select **Primary setup** or **Secondary setup**.

iTAP® mode

Press **[#]** in a text entry screen to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **[≡] > Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7][7][6][4]**, your phone displays:




- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.
- Press **1** to enter punctuation or other characters.

tap mode

Press **#** in a text entry screen to switch to **TAP** mode. If you do not see **1** or **2**, press **≡** > **Entry Setup** to set **TAP** mode as your **Primary** or **Secondary** text entry mode.

To enter text in **TAP** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **8** one time, your phone displays:

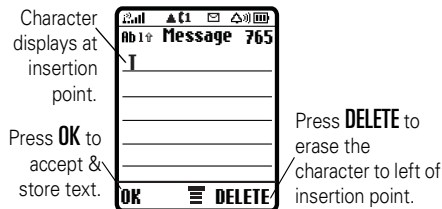

After 2 seconds, the character is accepted and the cursor moves to the next position.

numeric mode

In a text entry screen, press **#** to switch entry modes until the **12** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press **#** to switch to another entry mode.

symbol mode

In a text entry screen, press **#** to switch entry modes until the **@** (symbol) indicator displays.

Press keypad keys repeatedly to cycle through its symbols. Highlight the symbol you want, then press **SELECT**.

volume

You can adjust the earpiece speaker volume while you are talking by pressing **◂◃** right/up to increase the volume or left/down to decrease the volume. You can also adjust the volume by pressing the side volume keys.

Tip: During a call, you can set your phone to mute by pressing **≡** > **Mute**.

navigation key

Press the *navigation key* **◂◃** up, down, left, or right to scroll and highlight options.



handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press **SPKR ON** to turn the handsfree speaker on. When your handsfree speaker is on, you can press **SPKR OFF** to turn it off.

Note: The handsfree speaker does not work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's **unlock code** is originally set to **1234**. The **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: Press  > **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering     or the last four digits of your phone number. If that doesn't work, press  and enter your security code instead.

If you forget your other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

check battery meter

To check your battery meter:

Press  > **Settings** > **Phone Status** > **Battery Meter**.

customize

ring style

Your phone rings and/or vibrates to notify you of an incoming call, message, or other event. This ring and/or vibration is called an alert. You can select one of six different alert profiles: **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibrate & Ring**, **Vibrate then Ring**, and **Silent**.

 = Loud Ring

 = Soft Ring

 = Vibrate

 = Vibrate then Ring

 = Silent

 = Vibrate & Ring

The ring style profile's indicator displays at the top of your home screen. To choose your profile:

Find it: Press  > **Settings** > **Ring Style** > **Style**
> *style name*

change alerts

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press  > **Settings** > **Ring Style** > **Detail**
> *desired event* > **Change** > *alert for event*

time & date

To set the time and date for your phone:

Find it: Press  > **Settings** > **Initial Setup**
> **Time and Date**

Note: To choose an analog or digital clock for your home screen, press  > **Personalise** > **Home Screen** > **Clock Set**.

wallpaper

You can set a photo, picture, or animation as a wallpaper (background) image on your home screen.

Find it: Press  > **Personalise** > **Wallpaper**

Select one of the following options.

option	
Set Layout	Select Center to center the image on the display, Tile to repeat the image across the display, Fit-to-Screen to fit the image to the display.
Picture	Select an image for your wallpaper image.

screen saver

You can set a photo, picture, or animation as a screen saver image. The screen saver displays when no activity is detected for a specified time.

Tip: This feature helps save your screen but not your battery. To extend battery life, turn off the screen saver.

Find it: Press  > **Personalise** > **Screen Saver**

display appearance

To choose the colors that your phone uses for indicators, highlights, and soft key labels:

Press  > **Personalise** > **Color Setting**.

To set your display Color Setting:

Press  > **Personalise** > **Color Setting**.

backlight

To save battery life, the backlight turns off when you are not using your phone. The backlight turns back on when you press any key. To set how long your phone waits before the backlight turns off:

Press  > **Settings** > **Initial Setup** > **Backlight**.

answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press  > **Settings** > **In Call Setup** > **Answer Options**

option	
Multi-key On	Answer by pressing any key or open to answer.
Multi-key Off	Answer by pressing  .
Open to answer	Answer by opening the flip.

personal greetings

You can create personal greetings that display when you turn on the phone:

Find it: Press  > **Personalise** > **Greeting**

optional handsfree operation

A phone headset enables you to use your phone without using your hands.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Find it: Press  > **Settings** > **Headset**
> **Auto Answer** > *desired mode*

calls

This chapter describes features related to making and answering calls.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Tip: Press  from the home screen to see the Dialed Calls list.

Find it: Press  > **Recent Calls**

- 1 Press  to scroll to **Received Calls** or **Dialed Calls**.
- 2 Press **SELECT** to select the list.

3 Press  to scroll to an entry. A ✓ means the call connected.

4 Press  to call the number.

5 Press **VIEW** to see call details.

To see the **Dialed Calls list**, press . This menu can include:

option	
Store	Create a contacts entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID	Hide your caller ID for the next call.
Send Message	Deliver a message.

option	
Add Digits	Add digits after the number.
Attach Number	Attach a number from the contacts or recent calls lists.

redial



- 1 Press to view the **Dialled Calls** list.
- 2 Press to scroll to the entry you want to call.
- 3 Press to redial the number. If you hear a busy signal and see **Call Failed, Number Busy**, press to redial the number.

return a call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **VIEW** key to see the **Received Calls** list.
- 2 Press to select a call to return.
- 3 Press to make the call.

notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad. These digits can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find it: Press > **Recent Calls** > **NotePad**

Press to call the number.

or

Press **STORE** to create a contacts entry with the number in the **No.** field.

hold or mute a call

When you are on a call:

Press  > **Hold** to put all active calls on hold.

Press  > **Mute** to put all active calls on mute.

Press again to turn **Mute** off.

call waiting



When you're using your phone, you will hear an alert if you receive a second call.

- 1 Press  to answer the new call.
- 2 Press **SWITCH** to switch between calls.

or

Press **LINK** to connect the 2 calls.

or

Press  > **End Call On Hold** to end the call on hold.

To turn the call waiting feature on or off:

Find it: Press  > **Settings** > **In Call Setup**
> **Call Waiting**

caller ID



Calling line identification (caller ID)

shows the phone number for an incoming call on your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your contacts, or **Incoming Call** when caller ID information isn't available.

To show or hide **your phone number** for the next outgoing call or for all calls:

Find it: Press  > **Settings** > **In Call Setup**
> **My Caller ID**

emergency calls

Your service provider programs one or more emergency phone numbers (such as 911) that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. The preprogrammed emergency number(s) in your phone may not work in all locations. Sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

To call the emergency number at any time:

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

international calls



If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code, such as +   for the U.K., +   for France, etc., and phone number.

1-touch dial

To call contacts entries 1 through 9, press and hold the 1-Touch Dial number for one second.

You can set 1-Touch Dial to call the entries in your phone's memory contacts, your SIM card's contacts, or your **Fixed Dial** list:

Find it: Press  > **Settings** > **Initial Setup** > **1-Touch Dial** > **Phone**, **SIM**, or **Fixed Dial**

Note: For more information on the Fixed Dial feature, see the Advanced Calling section on page 50.

You can call contacts entries 1 through 9 with the push of a single key. The first nine numbers save to the SIM card correspond to the 1-Touch Dial keys 1 through 9.

Press and hold the 1-Touch Dial number for 1 second.

Find it: Press  > **Contacts**, highlight a phone entry, then  > **Edit** > **Speed No.**

voicemail



To listen to your messages, you must call your voicemail phone number. Voicemail messages that you receive are stored on the network, not on your phone. Contact your service provider for more details.

store your voicemail number

Find it: Press  > **Messages** >  > **Voicemail Setup**

- 1 Press keypad keys to enter your voicemail number.
- 2 Press **SAVE** to store the number.

receive voicemail

When you receive a voicemail message, your phone displays **1 New Message** and a new voicemail indicator on the status pane. (Some networks only indicate when you have messages, whether they are new or not.) If users delete all voicemail messages, the voicemail indicator will disappear.

To listen to your voicemail messages:

Find it: Press  > **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you do not have a voicemail number stored, the phone guides you through storing a number.

inserting special characters into dialing sequences

You can insert special characters, as well as numbers, in a phone number.

option	
p (pause)	Your phone waits until the call connects before it dials the next digit(s) in the series.
w (wait)	Your phone waits until the call connects, then prompts you for confirmation before it dials the next digit(s).

You can add a pause or a wait while your call is dialing. To add a pause before the phone connects, press and hold **[*]**. When **p** appears, press it to add a pause. Or, if you are adding a wait, keep holding **[*]**. The **w** will eventually appear and, when it does, press it to add a wait.

other features

advanced calling

feature	
conference call	After your first participant is connected, dial the next number, press  and then press the LINK key. 
attach a phone number	Dial an area code or prefix for a contact number, press  > Attach Number . 

feature	
speed dial	Speed dial a contacts entry:  Enter a speed dial number, press  and then  . Tip: If you forget the speed dial number for a contact's entry, press  > Contacts , highlight the desired entry, and press the VIEW key.
call diverting	Set up or cancel call diverting:   > Settings > Call Divert

feature		
call barring	Restrict outgoing or incoming calls:	
	 > Settings > Security > Call Barring	
change phone line	If you have a SIM card for dual phone lines, you can change your line to make and receive calls from your other phone number.	
	 > Settings > Phone Status > Active Line	
	The active line indicator shows which phone line is active (see page 32).	

feature		
lantern	 > Settings > Lantern or  > Extras > Lantern	
	This feature makes your LCD screen function as a flashlight. To deactivate it, press any key.	
fixed dial	When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.	
	Turn fixed dialing on or off:  > Settings > Security > Fixed Dial	
	Use the fixed dial list:  > Extras > Dialing Services > Fixed Dial	

feature	
quick dial	Dial preprogrammed phone numbers: 
	 > Extras > Dialing Services > Quick Dial
DTMF tones	Set to Long DTMF or Short DTMF:  > Settings > Initial Setup > DTMF

contacts

feature	
add new entry	Create a new Contact entry:  > Contacts >  > New > Number > Store To. Shortcut: Key in the the number using keypad keys, then press STORE. Note: An entry stored on the SIM card stays on that SIM card. If the SIM card is replaced with another, you won't find the same entry. An entry stored on the phone stays on the phone. If the SIM card is replaced with another, you will find the same entry.

feature

add new entry

Note: Your phone's memory limit is 100 entries. The SIM card's memory limit depends on your carrier's SIM card type (maximum 255 entries).

Tip: Some people have more than one phone number. When creating a contact entry, select **More** to store another number for the same **Name**.

feature

download ringtones

You can use this function to send ringtones from one handset to another:



 > **Messages** > **Create** > **MMS**
> **Insert** > **Sound**

Ringtones can be downloaded from the **Web Browser**. When you receive an MMS from another party, you can retrieve a ringtone from that message. You can also send ringtones through MMS.

Note: You can download mp3 ringtones via the **Browser** only.

Note: Memory limit for ringtone downloads is 1 MB.

feature	
dial number	Call a number stored in the contacts:  > Contacts, highlight the Contact entry, press . Shortcut: In the contacts, press a keypad key one or more times to jump to entries that begin with the letters on that key. This method can be narrowed by adding more letters, up to a maximum of 12.
set category for entry	 > Contacts > <i>entry</i>  > Category You can classify an entry into the following categories: All, Business, Personal, General, VIPs, or a category you create.

feature	
set category view	 > Contacts > <i>entry</i>  > Category You can view All entries or those in the predefined category such as Business, Personal, General, VIPs, or a category you create.
search contacts entry	Press a keypad key 1 or more times to jump to entries that begin with the key's letters. Press a second letter to jump to entries beginning with the two letters you entered. You can enter up to twelve letters.

feature	
sort contacts list	Set the order in which entries are listed:  > Contacts >  > Setup > Sorting By > <i>sort order</i>
copy contacts entry	Copy a contacts entry to the SIM card, or from the SIM card to the phone:  > Contacts, highlight the entry, press  > Copy > Entries > To
copy multiple entries	Copy multiple contacts entries between the phone and SIM card:  > Contacts, highlight one entry, press  > Copy > Entries, press CHANGE, highlight another entry, press ADD. Repeat as necessary, press DONE.

feature	
set a picture ID for contacts entry	When receiving a call from a phone number stored on your phone, the picture associated with that number is displayed.  > Contacts > <i>entry</i>.  > Edit > Picture. Note: The Picture option is not available for entries stored in SIM cards.

messages

For basic multimedia message features, see page 21.

feature		
send text message	 > Messages > Create > SMS/EMS	
send multimedia message	 > Messages > Create > MMS Note: Only MMS messages 100 kb or less can be sent and received.	
send a quick note	 > Messages > Quick Notes	
send a multimedia template	Open a multimedia template with preloaded media:  > Messages > Create > MMS Templates	

feature	
read new message	Read a new text or multimedia message:  Press the READ key when the New Message notification displays.
read old messages	Read old messages:   > Messages > Inbox Press  to perform various operations on a message.
read sent messages	Read messages that you sent:   > Messages > Outbox Sent messages are saved in the Outbox .
edit old draft	Save the message that you are editing to the Draft folder for later editing:  > Messages > Draft

feature		
browser messages	Read messages received by your browser:	
	 > Messages > Browser Msgs	
info services	Read messages from subscription-based services:	
	 > Messages > Info Services	

feature		
sending and receiving vCard	You can send the vCard by sending MMS with an attachment (vCard is the attachment). You can also receive vCard from another party through MMS with an attachment. You can save the received vCard by opening MMS with the vCard attachment. This function can be sent from one handset to another.  > Messages > Create > MMS or MMS Templates > Insert > Attachment > [New Attachment] > vCard Note: To change editing modes in the wap editor, press .	

chat

feature	
start chat	 > Extras > Chat  >  > New Chat
receive chat request	Press the ACCEPT key or the IGNORE key. 
end chat	During a chat session:  > End Chat 

web browser (wap 2.0)



feature	
start browser	 > WebAccess > Start Browser
go to bookmarks	 > WebAccess > Web Shortcut

feature

go to URL	 > WebAccess > Go to URL
choose web session	 > WebAccess > Web Session
go to stored pages	 > WebAccess > Stored Pages
view/go to previous sites	 > WebAccess > History
adjust web settings	 > WebAccess > General Setting
end web browser	Press  in the WebAccess menu and choose 4. Exit. or  > OK.

personalising

feature	
language	Set menu language:  > Settings > Initial Setup > Language
scroll	Set the highlight bar to stop or wrap around in the menu lists:  > Settings > Initial Setup > Scroll
ring volume	 > Settings > Ring Style > <i>style</i> Detail > Ring Volume
keypad volume	 > Settings > Ring Style > <i>style</i> Detail > Key Volume
clock view	Display an analog or digital clock in the home screen:  > Personalise > Home Screen > Clock Set

feature	
menu view	Display the main menu as graphic icons or as a text-based list:  > Personalise > Main Menu > View
main menu	Reorder items in your phone's main menu:  > Personalise > Main Menu > Reorder
show/hide menu icons	Show or hide menu feature icons in the home screen:  > Personalise > Home Screen > Home keys > Icons
change home keys	Change the functions for the soft keys and navigation key in the home screen:  > Personalise > Home Screen > Home keys

feature	
shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold . Use a shortcut: Press , then press the shortcut number.
master reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset Note: Before the master reset, you need to input your security code.

feature	
master clear	To reset all options to their factory settings and clear all user entries (such as downloaded wallpapers, main menu animation, and sounds): Warning: This option erases all information you have entered (including contacts entries) and content you have downloaded. Once you erase the information, it cannot be recovered. All options are reset back to their factory settings, except for the unlock code, security code, and lifetime timer.  > Settings > Initial Setup > Master Clear To clear all information, you need to enter the Security Code (000000).

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time that you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

feature	
call times	Display call timers: 
	 > Recent Calls > Call Times

feature	
in-call timer	Display time during a call:   > Settings > In Call Setup > In-Call Timer
call cost	Display call cost trackers:   > Recent calls > Call Cost
call cost setup	Set a credit limit:   > Settings > In-Call Setup > Call Cost Setup
data times	Display data times:   > Recent Calls > Data Times
data volumes	Display data volumes:   > Recent Calls > Data Volumes

handsfree operation

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

feature	
speaker-phone	Activate a connected external speakerphone during a call:  Press SPKR ON and SPKR OFF to turn the speakerphone on and off.
auto answer	Automatically answer calls when connected to a car kit or headset:   > Settings > Headset > Auto Answer

network

feature	
network settings	Display network information and adjust network settings:   > Settings > Network

personal organizer

feature	
set alarm	 > Extras > Alarm Clock
turn off alarm	When an alarm displays: To turn off the alarm, press DISABLE . To set the alarm to ring later, press the SNOOZE key.
calculator	 > Extras > Calculator

feature	
currency converter	 > Extras > Calculator  > Exchange Rate Enter exchange rate, press the OK key, enter amount, and select  > Convert Currency.
calendar	 > Extras > Calendar A way to schedule reminders of important events/errands.

feature	
stop watch	 > Extras > Stop Watch Press START to start counting the time, press STOP to stop counting the time, and press RESET to reset the stopwatch. Note: After Stop Watch is activated, you can press SNAPSHOT to keep track of elapsed time for later reference. After you stop the Stop Watch, view elapsed time snapshots by scrolling right or left through snapshot 1, 2, 3, etc.

security

feature	
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
phone lock	 > Settings > Security > Phone Lock Select to lock the phone right now or enable/disable the Automatic Lock .
easy prefix	Easy Prefix is a useful tool for you to set your prefix Auto Change type and choose your preferred operator.

fun & games

feature	
manage pictures	Manage pictures and animations:  > Multimedia > Pictures
manage sounds	Manage ring tones and music that you have downloaded or composed:  > Multimedia > Sounds
start browser	 > Web Access > Start Browser 
start games	 > Games

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.63 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.22 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to

this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

index

A

- accessories 16, 38, 62
- accessory connector
 - port 1, 2
- alarm clock 62
- alarm, set 62
- alarm, turn off 62
- alert
 - set 40
 - turn off 40
- animation 21, 41, 55, 64
- answer a call 7, 20, 42
- attach a number 45, 50

B

- backlight 7, 18, 42
- barring calls 51

- battery 17
 - extending battery
 - life 18, 42
- battery indicator 32
- battery life, extending 7, 18
- brightness 23

C

- cables 1, 18
- calculator 6, 62
- calendar 6, 63
- call
 - answer 7, 20, 42
 - barring 51
 - divert 50
 - divert, status 32
 - end 20
 - make 20, 44
 - waiting 46
- call cost 61
- call timers 61
- caller ID 46, 55, 62
- calls
 - international 47
- camera 2, 23
- car kit 38, 62
- center key 1, 2, 38
- center select key 38
- chat 58
- codes 39
- color style 41
- conference call 50
- contacts 44, 45, 50
- currency converter 63

D

- data call 31
- data times 61
- data volumes, tracking 61
- dial
 - fixed 51
 - speed 50
- dial a phone number 20, 44
- dialing services 51
- dialled calls 44
- display 16, 30, 41
 - backlight 42
- divert a call 50
- DTMF tones 52

E

- earpiece volume 38
- emergency number 20, 47
- end a call 20

- end key 1, 2, 20
- enter unlock code
 - message 39
- external display 2

F

- fax call 31
- fixed dial 51
- flicker 24
- FM radio 25

G

- games 64
- greeting 42

H

- handsfree speaker 38
- headset 38, 62
- headset jack 1, 2
- home screen 16, 30, 41, 59

I

- incoming call message 46
- initial setup 40
- international calls 47
- iTAP text entry
 - setup 36
- iTAP text entry mode 36

K

- keypad 21, 42, 59

L

- language 59
- lock
 - phone 64
- Low Battery message 32

M

- make a call 20, 44
- master clear 60

- master reset 60
- menu 16, 59
- menu icons 59
- message 36, 56
- message indicator 2, 22, 32
- message reminders 63
- missed calls message 45
- MMS 21
- multimedia messages 21
- music 53, 64
- mute a call 38, 46

N

- navigation key 1, 2, 38
- network
 - settings 62
- network settings 45, 62
- new password 39
- notepad 45
- numeric entry mode 37

O

- optional accessory 16
- optional feature 16

P

- password
 - new 39
- passwords. See codes
- personalise 31, 34
- phone number 20
- photo 55, 64
- picture 55, 64
 - setup 24
- picture ID 46, 55, 62
- power key 1, 2, 19

Q

- quick dial 52
- quick dial, note 6

R

- received calls 44
- recent calls 44
- redial 45
- reminders 63
- restrict calls 51
- restricting calls 51
- return a call 45
- ring style indicator 32, 40
- ring style, setting 40
- ring tone 53, 64
- ring volume 59
- ringer volume 59
- roam indicator 32

S

- safety information 8
- screen flicker 24
- security code 39
- send key 1, 2, 20

- setup
 - initial 40
 - picture 24
 - time and date 18
- shortcuts 60
- signal strength indicator 31
- SIM
 - 2 phone lines 32
 - PIN 39
 - store/edit phone number
 - or your name 20
- SIM (Subscriber Identity Module) card 17
- smart key 2, 59
- soft keys 1, 2, 59
- sounds 64
- speakerphone 38, 62
- speed dial 50
- standby time, increasing 42
- stop watch 63

- store your number 20
- symbol entry mode 38

T

- tap text entry
 - setup 37
- tap text entry mode 37
- Templates
 - MMS 21
- text entry 35
 - setup 36
- text message 36, 56
- timers 61
- turn on/off 19

U

- unlock
 - phone 39
- unlock code 39
- USB cables 1, 18

V

- voicemail 48
 - voicemail message
 - indicator 32, 48
- volume 38, 59

W


- wallpaper 41
- web browser 58
- web browser, start 64

Y

- your phone number 20


Chào mừng

Chào mừng bạn đã đến với thế giới thông tin di động kỹ thuật số của Motorola. Chúng tôi vui mừng khi bạn đã chọn máy điện thoại di động Motorola W375.

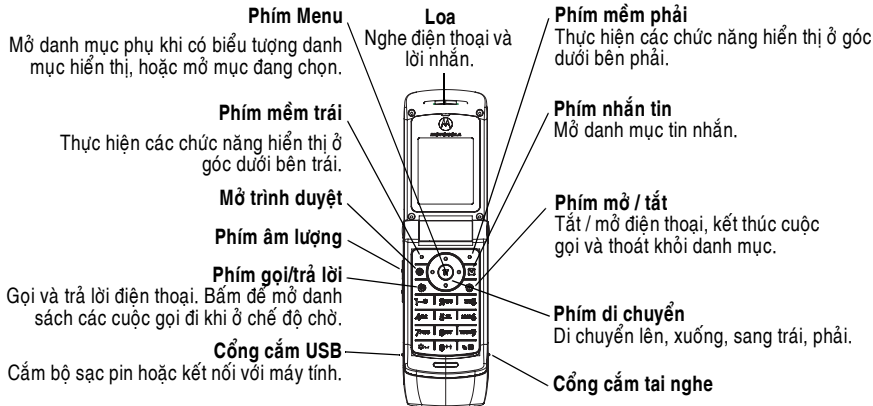

Ghi chú: Hình vẽ có tính chất minh họa. Máy điện thoại có thể không giống y như trong hình vẽ, tuy nhiên vị trí, thứ tự và chức năng của các phím bấm đều giống như trong sách hướng dẫn. Vui lòng đối chiếu với máy điện thoại thật.

hãy kiểm tra

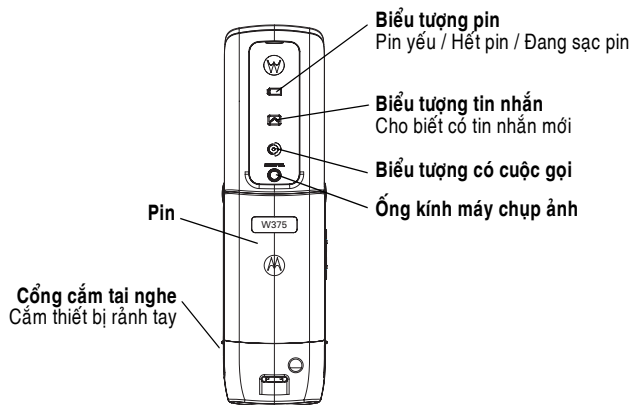

Ghi chú: Hình vẽ có tính chất minh họa. Máy điện thoại có thể không giống y như trong hình vẽ, tuy nhiên vị trí, thứ tự và chức năng của các phím bấm đều giống như trong sách hướng dẫn. Vui lòng đối chiếu với máy điện thoại thật.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

Các chức năng của máy điện thoại phụ thuộc vào khả năng và cài đặt mạng di động của nhà cung cấp dịch vụ. Hơn nữa, một số tính năng có thể đã bị nhà cung cấp dịch vụ tắt hoặc giới hạn. Hãy liên hệ với nhà cung cấp dịch vụ về các chức năng của máy điện thoại và các dịch vụ hiện có. Mọi đặc tính, chức năng, và cấu hình của sản phẩm cũng như thông tin có trong sách hướng dẫn sử dụng được căn cứ trên các thông tin mới nhất và được cho là chính xác nhất tại thời điểm in sách. Công ty Motorola giữ quyền thay đổi hoặc cập nhật mọi thông tin, cấu hình mà không cần và không phải thông báo trước. MOTOROLA, biểu tượng cách điệu M là nhãn hiệu đã đăng ký ở Văn phòng Thương hiệu và Bản quyền Mỹ. Các sản phẩm và dịch vụ khác là tài sản của các công ty tương ứng. Thương hiệu Bluetooth có chủ sở hữu và Motorola có giấy phép sử dụng. Java và các biểu tượng liên quan đến Java thuộc quyền sở hữu của công ty Sun Microsystems, Inc. ở Mỹ và các nước khác. Microsoft và Windows là thương hiệu đã đăng ký

của công ty Microsoft Corporation; và Windows XP cũng là thương hiệu của công ty Microsoft Corporation.

© Motorola, Inc., 2006.

Lưu ý: các thay đổi về radio trên máy điện thoại, không được Motorola chuẩn y, đều có thể làm người dùng không sử dụng máy điện thoại được.

Lưu ý về bản quyền phần mềm

Các sản phẩm của Motorola mô tả trong hướng dẫn này bao gồm các phần mềm có bản quyền của Motorola và các công ty khác, được lưu trong bộ nhớ của máy hoặc dưới hình thức khác. Luật pháp của Mỹ và các quốc gia khác bảo vệ một số độc quyền của Motorola và các công ty khác về bản quyền phần mềm này, ví dụ như quyền phân phối, sao chép phần mềm này. Mọi sửa đổi, phân phối hoặc sao chép các phần mềm có trong sản phẩm của Motorola là bị ngăn cấm bởi luật pháp. Hơn nữa, việc mua sản phẩm Motorola không có nghĩa là được phép hoặc có quyền thực hiện những điều trên đối với các sản phẩm của công ty Motorola và những công ty khác, ngoại trừ quyền sử dụng sản phẩm như quy định của pháp luật hiện hành.

nội dung

hãy kiểm tra	2	số điện thoại		xem dung lượng pin .	41
vị trí các tính năng . . .	6	của bạn	21	cài đặt máy điện thoại	42
An toàn và thông tin		các tính năng nổi bật .	22	kiểu chuông	42
chung	8	tin nhắn đa		ngày & giờ	43
Sử dụng và bảo quản	15	phương tiện	22	hình nền	43
Phù hợp với qui định		tán gẫu	24	bảo vệ màn hình . . .	43
của Cộng đồng EU . . .	16	máy chụp ảnh	24	màn hình hiển thị . . .	44
các tính năng cơ bản .	17	đài FM	26	cách trả lời cuộc gọi.	44
giới thiệu sách		USB di động	29	lời chào.	44
hướng dẫn	17	các chức năng chính .	31	chế độ rảnh tay	45
thẻ SIM.	18	màn hình	31	tính năng về cuộc gọi	46
pin	18	danh mục	35	cuộc gọi vừa qua . . .	46
tắt và mở máy		nhập liệu	37	gọi lại điện thoại. . . .	47
điện thoại	20	âm lượng.	40	trả lời cuộc gọi	47
gọi điện thoại	21	phím di chuyển	40	sổ ghi	48
trả lời cuộc gọi	21	loa ngoài rảnh tay . . .	40	chờ hoặc câm tiếng .	48
		mã khóa và mật mã .	41	cuộc gọi đang chờ . .	48

số của người gọi	49	bảo mật	70
gọi khẩn cấp	49	trò chơi & giải trí . . .	71
gọi quốc tế	50	Độ hấp thu sóng	
quay số bằng		điện từ - SAR	72
một phím bấm	50	Thông tin từ Tổ chức	
thư thoại	51	Y tế Thế giới - WHO . .	73
chèn ký tự điều khiển		chỉ mục	74
vào số điện thoại. . . .	52		
các tính năng khác . . .	53		
tính năng cao cấp về			
cuộc gọi	53		
danh bạ điện thoại . .	55		
tin nhắn	60		
tán gẫu	63		
trình duyệt (wap 2.0) .	63		
cá nhân hóa	64		
thời gian gọi và			
cước phí.	67		
tính năng rảnh tay . .	68		
mạng di động	68		
thông tin cá nhân . . .	69		

Ghi chú: Các chức năng trong máy điện thoại có thể hơi khác, tùy từng quốc gia hoặc khu vực. vui lòng liên hệ với Trung tâm phục vụ khách hàng, đại lý hoặc cửa hàng bán máy điện thoại nếu bạn có thắc mắc về chức năng của máy điện thoại. Công ty Motorola có quyền điều chỉnh và thay đổi sách hướng dẫn sử dụng mà không cần thông báo trước cho bất kỳ ai về sự điều chỉnh hoặc thay đổi đó.

vị trí các tính năng

danh mục chính

 Contacts	 Games • Football • Space • Crazy	* Phải sử dụng tai nghe để nghe đài FM.
 Recent Calls • Received Calls • Dialed Calls • NotePad • Call Times ** • Call Cost ** • Data Times ** • Data Volumes **	 WebAccess ** • Start Browser • Web Shortcut • Go to URL • Web Session • Stored Pages • History • General Setting	** Phụ thuộc vào mạng di động hoặc sự đăng ký sử dụng
 Messages ** • Create • Inbox • Draft • Outbox • Quick Notes • Voicemail • Browser Msgs • Info Services • MMS Templates	 Multimedia • Camera • Pictures • Sounds • FM Radio *	Các chức năng trong máy điện thoại có thể hơi khác, tùy từng quốc gia hoặc khu vực. vui lòng liên hệ với Trung tâm phục vụ khách hàng, đại lý hoặc cửa hàng bán máy điện thoại nếu bạn có thắc mắc về chức năng của máy điện thoại. Công ty Motorola có quyền điều chỉnh và thay đổi sách hướng dẫn sử dụng mà không cần thông báo trước cho bất kỳ ai về sự điều chỉnh hoặc thay đổi đó.
 Extras • Calculator • MyMenu • Alarm Clock • Stop Watch • Chat ** • Dialing Services ** • STK Service ** • Calendar • Lantern	 Personalise • Home Screen • Main Menu • Color Setting • Greeting • Wallpaper • Screen Saver • Quick Dial **	Trên đây là sơ đồ danh mục chuẩn. Vui lòng xem danh mục thực sự ở trên máy điện thoại.
	 Settings (xem trang sau)	

danh mục cài đặt



Ring Style

- Style
- Detail



Call Divert **

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert



In Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Settings
- Backlight
- Scroll
- Language
- DTMF **
- TTY Setup **
- Master Reset
- Master Clear
- Format Additional Storage Device



Phone Status **

- My Numbers
- Active Line
- Battery Meter



Headset

- Auto Answer



Network **

- New Network
- Network Setup
- Avail. Networks
- My Network List
- Service Tone
- Call Drop Tone
- Band Selection



Security

- Phone Lock
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords



Easy Prefix **

- Auto Change
- Pref. Op



Lantern

- Lantern

* Phải sử dụng tai nghe để nghe đài FM.

** Phụ thuộc vào mạng di động hoặc sự đăng ký sử dụng

Các chức năng trong máy điện thoại có thể hơi khác, tùy từng quốc gia hoặc khu vực. vui lòng liên hệ với Trung tâm phục vụ khách hàng, đại lý hoặc cửa hàng bán máy điện thoại nếu bạn có thắc mắc về chức năng của máy điện thoại. Công ty Motorola có quyền điều chỉnh và thay đổi sách hướng dẫn sử dụng mà không cần thông báo trước cho bất kỳ ai về sự điều chỉnh hoặc thay đổi đó.

Trên đây là sơ đồ danh mục chuẩn. Vui lòng xem danh mục thực sự ở trên máy điện thoại.

An toàn và thông tin chung

Chương này có các thông tin quan trọng về cách sử dụng máy điện thoại hiệu quả và an toàn. Đề nghị bạn đọc kỹ các thông tin này trước khi sử dụng máy.¹

Đặc tính của sóng vô tuyến (Radio Frequency - RF)

Điện thoại di động của bạn là một thiết bị thu phát sóng vô tuyến. Khi đang MỞ, nó gửi và nhận các tín hiệu sóng vô tuyến. Khi bạn nói chuyện điện thoại, hệ thống điều khiển cuộc gọi sẽ quy định cường độ phát sóng của máy điện thoại.

-
1. Các thông tin trong hướng dẫn này thay thế các thông tin đã nêu về an toàn trước ngày 1 tháng 5 năm 2006.

Máy điện thoại Motorola của bạn được thiết kế phù hợp với các tiêu chuẩn và hướng dẫn của các tổ chức quốc gia và quốc tế đã thiết lập để bảo vệ cộng đồng khỏi tác động của việc tiếp xúc với năng lượng điện từ của sóng vô tuyến.

Các lưu ý khi sử dụng máy điện thoại

Để đảm bảo máy điện thoại hoạt động tốt và sự an toàn của tín hiệu sóng điện từ với cơ thể con người, phù hợp với các quy định ở trên, bạn luôn nên theo các hướng dẫn an toàn được nêu sau đây.

Bảo quản ăng ten ngoài

Nếu máy điện thoại có ăng ten ngoài, chỉ dùng ăng ten được nhà sản xuất cung cấp hoặc do Motorola phê chuẩn. Sử dụng ăng ten không phù hợp hoặc có sửa đổi hay những thiết bị gắn thêm có thể gây hại cho điện thoại và/hoặc không phù hợp với các qui định ở nước sở tại.

KHÔNG cắm vào ăng ten khi đang **SỬ DỤNG** điện thoại vì như vậy sẽ ảnh hưởng đến chất lượng cuộc thoại và tổn năng lượng hơn mức cần thiết.

Sử dụng điện thoại

Khi nói chuyện điện thoại, cầm máy như cách cầm điện thoại để bàn thông thường.

Nếu bạn không cầm máy điện thoại để nghe nói như bình thường và cũng không dùng các thiết bị đeo đạt tiêu chuẩn, nên để máy và ăng ten cách xa cơ thể ít nhất 2,5cm (1 inch) khi máy đang hoạt động.

Khi sử dụng các chức năng về dữ liệu của máy điện thoại, dùng hoặc không dùng dây cáp truyền, nên để máy điện thoại và ăng ten cách xa cơ thể ít nhất 2,5cm (1 inch) khi máy đang hoạt động.

Sử dụng các phụ kiện không được Motorola công nhận, gồm cả các loại pin và ăng ten, có thể làm cho máy điện thoại bị vượt quá giới hạn an toàn về sóng điện từ. Vui lòng xem danh sách các phụ kiện Motorola công nhận tại trang web www.motorola.com.

Nhiều sóng điện từ và sự tương thích

Hầu như tất cả các thiết bị điện đều có thể bị nhiễu sóng điện từ nếu không được bảo vệ, che chắn, hay nói cách khác là được thiết kế để tương thích với sóng điện từ. Trong vài trường hợp, máy điện thoại có thể gây ra nhiễu điện từ.

Tuân theo hướng dẫn để tránh làm nhiều các thiết bị

Tắt ngay máy điện thoại ở những nơi có treo băng yêu cầu. Những nơi này có thể có những thiết bị y tế hoặc chăm sóc sức khỏe, nhạy cảm với các nguồn sóng điện từ bên ngoài.

Khi ở trên máy bay, hãy tắt máy điện thoại khi được yêu cầu. Nếu máy điện thoại có chế độ dùng được trên máy bay hoặc chức năng tương tự, hãy hỏi ý kiến của phi hành đoàn trước.

Máy điều hoà nhịp tim

Nếu bạn có sử dụng máy điều hòa nhịp tim, hãy hỏi ý kiến bác sĩ trước khi dùng máy điện thoại di động.

Người sử dụng máy điều hoà nhịp tim nên:

- **LUÔN LUÔN** giữ máy điện thoại cách máy điều hoà nhịp tim hơn 20 cm

(khoảng 8 inch) khi máy điện thoại đang **MỞ**

- **KHÔNG** để máy trong túi áo ngực.
- Nghe điện thoại ở tai phía bên kia so với máy điều hoà nhịp tim để giảm thiểu nhiễu.
- Nếu bạn có nghi ngờ máy điều hoà nhịp tim đang bị nhiễu vì điện thoại, **TẮT** ngay máy điện thoại.

Thiết bị trợ thính

Một vài loại máy điện thoại di động có thể gây nhiễu tới các thiết bị trợ thính. Trong trường hợp này bạn cần liên hệ với nhà sản xuất thiết bị trợ thính hoặc bác sĩ để được chỉ dẫn thêm.

Các thiết bị y tế khác

Nếu bạn có sử dụng bất kỳ một thiết bị y tế cá nhân nào, hãy tham khảo nhà sản xuất thiết bị hoặc bác sĩ để biết nếu thiết bị chịu

được tác động của sóng điện từ.

Cẩn thận khi lái xe

Xem lại luật qui định về sử dụng điện thoại di động trong khu vực mà bạn đang lái xe. Luôn tuân thủ đúng luật.

Nếu bạn sử dụng điện thoại khi đang lái xe, bạn cần:

- Tập trung lái xe. Sử dụng điện thoại có thể làm bạn mất tập trung lái xe. Hãy ngắt cuộc gọi nếu bạn không thể tập trung vào việc lái xe.
- Sử dụng tính năng “rảnh tay”, nếu có.
- Lái xe vào lề đường và dừng lại trước khi gọi hoặc trả lời cuộc gọi khi điều kiện lái xe bắt buộc phải như thế.

Hướng dẫn lái xe an toàn được in ở cuối quyển sách này và / hoặc ở trang web:
www.motorola.com/callsmart.

Các lưu ý khi sử dụng máy

Tuân thủ mọi biển báo khi sử dụng máy điện thoại ở khu vực công cộng, như ở bệnh viện, khu vực nổ mìn.

Đệm hơi an toàn trong ô tô

Không để máy điện thoại di động lên trên đệm hơi hoặc nơi đệm sẽ phồng lên.

Môi trường dễ nổ

Khu vực dễ cháy nổ thường có thông báo rõ ràng hoặc cũng có thể không có. Các nơi dễ cháy nổ này có thể là nơi tiếp nhiên liệu như hầm tàu, trạm xăng dầu, các phương tiện vận tải nhiên liệu và hoá chất, các nơi có nhiên liệu để ngoài trời, những khu vực có nhiều bụi hoá chất, bụi kim loại.

Khi ở trong các môi trường như vậy, tắt máy điện thoại, không tháo, lắp hoặc sạc pin. Tia lửa từ pin điện thoại trong môi trường này có thể làm cháy hoặc nổ.

Máy hỏng

Nếu máy điện thoại hoặc pin bị ẩm hoặc ướt nhiều, bị rơi nặng, dùng cố sử dụng mà hãy mang máy đến trung tâm dịch vụ bảo hành của Motorola để xem xét. Không cố làm khô máy bằng các nguồn nhiệt bên ngoài như là lò vi ba.

Pin và Bộ sạc

Mọi pin điện thoại có thể gây hư hỏng tài sản, thương tích hoặc bỏng nếu có vật dẫn điện như nữ trang, chìa khoá hoặc dây chuyền chạm vào mạch pin. Các vật này có thể nối mạch và bị nóng lên. Cẩn trọng với các pin đã xạc, nhất là khi cất trong túi, ví hay các vật chứa bằng kim loại. **Chỉ sử dụng pin và bộ sạc chính gốc Motorola.**

Cảnh báo: để phòng bị thương, không vút pin vào lửa.

Máy điện thoại và pin có thể có các ký hiệu hoặc biểu tượng sau:

Biểu tượng	Giải thích
	Thông tin an toàn quan trọng.
	Không được tiêu hủy máy hoặc pin trong lửa.
	Máy điện thoại hoặc pin phải được tái chế theo qui định của địa phương. Liên hệ với giới trách địa phương để biết thêm chi tiết.
	Không được vút máy hoặc pin vào thùng rác.
	Máy điện thoại có pin loại lithium ion.
	Không làm ướt máy điện thoại, pin và bộ sạc.

Biểu tượng	Giải thích
	Nghe nhạc quá lớn sẽ ảnh hưởng đến thính lực.

Bị hóc

Máy điện thoại có nhiều bộ phận nhỏ, có thể gây hóc cho trẻ nhỏ. Giữ máy và các phụ kiện ở xa tầm với của trẻ em.

Các bộ phận kính

Một số bộ phận của máy điện thoại được làm bằng kính. Phần kính này có thể bị vỡ nếu máy bị rơi trên nền cứng hoặc va đập mạnh. Nếu kính bị vỡ, đừng chạm vào chỗ vỡ hoặc tháo kính vỡ ra. Ngưng sử dụng máy cho đến khi trung tâm bảo hành thay kính mới cho bạn.

Động kinh/Hoa mắt

Có một số người dễ bị động kinh hoặc hoa mắt khi nhìn chăm chú vào màn hình nhấp nháy, ví dụ như khi xem vô tuyến truyền hình hoặc chơi trò chơi điện tử. Chúng động kinh hoặc hoa mắt này có thể xảy ra với người chưa từng có tiền sử bệnh động kinh hoặc hoa mắt.

Nếu bạn hoặc trong gia đình bạn có người có tiền sử bệnh động kinh hoặc hoa mắt, vui lòng hỏi bác sĩ trước khi chơi trò chơi trong máy điện thoại hoặc mở chế độ nhấp nháy màn hình (nếu có).

Hãy ngưng việc sử dụng máy điện thoại và đi khám bác sĩ nếu có các triệu chứng sau: co giật người, co giật mắt hoặc cơ, mất tri thức, cử động vô thức hoặc mất phương hướng. Hãy luôn để màn hình ở mức xa mắt nhất có thể được, chơi trò chơi trong môi trường ánh sáng đầy đủ, nghỉ ít nhất 15

phút sau mỗi tiếng chơi trò chơi và ngừng không chơi trò chơi khi bạn đã mệt.

Nhắc nhở về việc mở loa quá lớn



Mở loa hết cỡ để nghe nhạc hoặc nói chuyện có thể ảnh hưởng đến thính lực của bạn.

Bấm phím nhiều lần

Khi bạn thực hiện nhiều lần các động tác bấm phím, bạn có thể bị mỏi bàn tay, cánh tay, vai, cổ hoặc các bộ phận khác của cơ thể. Nếu bạn bị mỏi hoặc đau khi đang hoặc sau khi bấm phím, hãy ngưng sử dụng máy điện thoại và nên đi khám bác sĩ.

Sử dụng và bảo quản

Để bảo quản tốt máy điện thoại Motorola, hãy giữ máy khỏi:



mọi chất lỏng

Không để máy bị ướt nước, bị mưa, mồ hôi hoặc trong môi trường có độ ẩm cao.



bụi bẩn

Không để máy bị bẩn vì bụi, bùn, cát, thức ăn hoặc các chất bẩn khác.



nhệt độ quá cao / thấp

Không để máy ở môi trường nhiệt độ dưới $-10^{\circ}\text{C}/14^{\circ}\text{F}$ hoặc trên $45^{\circ}\text{C}/113^{\circ}\text{F}$.



lau máy

Để lau máy điện thoại, chỉ nên dùng vải mềm, khô. Không nên dùng cồn hoặc các cách làm vệ sinh khác.



lò vi sóng

Không làm khô máy bằng cách cho vào lò vi sóng.



bị rơi

Không làm rơi máy điện thoại.


Phù hợp với qui định của Cộng đồng EU



Công ty Motorola tuyên bố rằng sản phẩm này phù hợp với:

- Các yêu cầu cơ bản và các điều khoản tương ứng của qui định Directive 1999/5/EC.
- Tất cả các qui định khác có liên quan của EU Directives.

Bạn có thể tham khảo bản Tuyên bố phù hợp chất lượng (Declaration of Conformity - DoC) với qui định Directive 1999/5/EC (R&TTE Directive) tại địa chỉ www.motorola.com/rtte để tìm bản tuyên bố phù hợp, nhập vào số chứng nhận sản phẩm in trên máy điện thoại vào mục tìm kiếm "Search" trong trang web này.

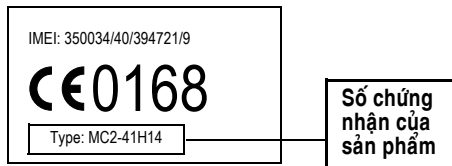

Hình trên minh họa một Số chứng nhận sản phẩm.

Tái chế để bảo vệ môi trường



Khi nhìn thấy biểu tượng này trên sản phẩm Motorola, xin đừng hủy bỏ sản phẩm chung với rác sinh hoạt.

Tái chế máy điện thoại và phụ kiện

Vui lòng không hủy bỏ máy điện thoại và các phụ kiện như bộ sạc, tai nghe, chung với rác sinh hoạt. Ở một số nước hoặc khu vực đã có hệ thống thu hồi và xử lý rác thải điện tử. Vui lòng liên hệ với chính quyền địa phương để biết thêm chi tiết. Nếu nơi bạn ở chưa có hệ thống thu hồi đã nêu, hãy gửi lại máy điện thoại hoặc phụ kiện không dùng cho Trung tâm Dịch vụ được chỉ định của Motorola tại khu vực của bạn.

các tính năng cơ bản

giới thiệu sách hướng dẫn

Phần này hướng dẫn bạn cách chọn mục trong danh mục:

Tìm chức năng: Bấm  > **Recent Calls**
> **Dialed Calls**

Trong ví dụ này, khi ở màn hình chờ, bạn phải bấm phím menu  để mở danh mục chính, di chuyển đến và chọn **Recent Calls**, rồi di chuyển đến và chọn **Dialed Calls**.


Bấm **·** để di chuyển tới mục chọn. Bấm **SELECT** hoặc  để chọn mục trong danh mục.

biểu tượng	
	Cho biết tính năng phụ thuộc vào việc đăng ký sử dụng hoặc vào mạng di động. Liên hệ với nhà cung cấp dịch vụ để biết thêm chi tiết.
	Cho biết tính năng đòi hỏi phải có phụ kiện chọn thêm.

thẻ SIM


Thẻ SIM (*Subscriber Identity Module*) chứa thông tin cá nhân của bạn như số điện thoại, thông tin dịch vụ, và danh bạ điện thoại / tin nhắn.

Cảnh báo: Không bẻ cong hoặc làm xước thẻ. Tránh không cho thẻ tiếp xúc với tĩnh điện, nước hoặc bụi.

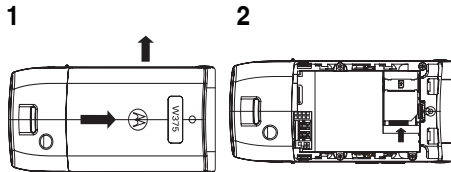

pin

lắp pin

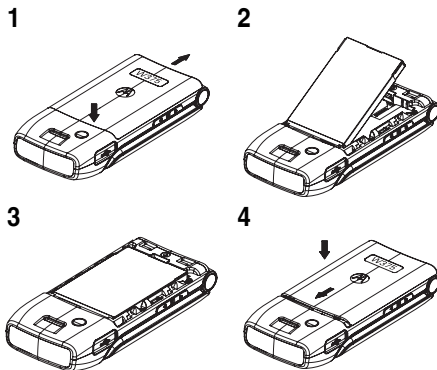

Ghi chú: Nếu bạn tháo pin ra khỏi máy trong một thời gian dài, máy điện thoại sẽ yêu cầu bạn cài đặt lại ngày và giờ. Nếu bạn không cài đặt lại thời gian, thông tin ngày và giờ sẽ bị ảnh hưởng.


Bạn có thể điều chỉnh lại ngày giờ bằng cách:

Tìm chức năng: Bấm  > **Settings** > **Initial Setup** > **Time and Date**

Tuy nhiên nếu bạn chỉ tháo pin ra trong một vài giây (ví dụ khi thay thẻ SIM), máy điện thoại sẽ không yêu cầu bạn phải nhập lại ngày giờ, hoặc nếu được yêu cầu, bạn hãy bấm **BACK** ở màn hình nhập ngày giờ. Đồng hồ trong máy chỉ bị sai lệch không đáng kể.

sạc pin

Bạn phải sạc đầy pin trước khi sử dụng máy điện thoại. Pin mới chưa được sạc đầy. Cắm một đầu USB vào máy

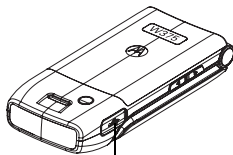

Cổng cắm bộ sạc
Cắm bộ sạc vào.

điện thoại và đầu phích vào ổ điện. Máy điện thoại sẽ hiển thị câu **Charge Complete** khi sạc xong pin.

Hướng dẫn: Bạn không thể sạc nhồi pin. Pin sẽ hoạt động tốt sau một vài lần sạc xả.

Pin mới khi xuất xưởng không được sạc đầy. Bạn phải lắp và sạc pin trước khi sử dụng máy điện thoại. Một số pin chỉ hoạt động tốt sau một vài lần sạc/xả.

sử dụng pin

Hiệu suất của pin phụ thuộc nhiều yếu tố khác nhau, bao gồm cấu hình của mạng di động, cường độ sóng, nhiệt độ môi trường, thiết bị ngoại vi gắn kèm với điện thoại.

- Luôn sử dụng pin và bộ sạc chính gốc Motorola. Chế độ bảo hành máy sẽ không bao gồm các hư hỏng do sử dụng pin và/hoặc bộ sạc không của Motorola.



- Pin mới hoặc pin để lâu không dùng cần được sạc lâu hơn.
- Để pin trong môi trường nhiệt độ trong phòng khi sạc.
- Cất pin ở nơi mát, tối và khô ráo.
- Không để pin trong môi trường nhiệt độ dưới -10°C (14°F) hoặc quá 45°C (113°F). Luôn mang theo điện thoại khi rời khỏi xe ô tô.
- Sau một khoảng thời gian dài, pin sẽ bị giảm hiệu suất và cần phải sạc lâu hơn. Đó là hiện tượng bình thường. Nếu bạn sạc pin đều nhưng

thời gian đàm thoại bị giảm đi và thời gian sạc pin dài lên thì đó là lúc bạn nên mua pin mới.



Liên hệ với trung tâm tái chế ở địa phương về cách tiêu hủy pin.

Cảnh báo: Không hủy pin trong lửa vì có thể gây nổ.

Vui lòng đọc kỹ những thông tin về sử dụng pin trong mục “An toàn và Thông tin chung” in ở trong sách này trước khi sử dụng máy.

tắt và mở máy điện thoại

Bấm và giữ phím  trong khoảng 2 giây để mở máy điện thoại. Nếu được hỏi, nhập vào mã số PIN để mở khóa thẻ SIM.



Cảnh báo: Nếu bạn nhập sai mã số PIN 3 lần liên tiếp, thẻ SIM của bạn sẽ bị khóa lại và máy điện thoại hiển thị câu **SIM Blocked**. Hãy liên hệ với nhà cung cấp dịch vụ.

Để tắt máy điện thoại, bấm và giữ phím  trong khoảng 2 giây.

gọi điện thoại

Nhập vào số muốn gọi và bấm  để gọi điện thoại.

Để kết thúc cuộc gọi, bấm .

trả lời cuộc gọi

Khi máy điện thoại đổ chuông và/hoặc rung, bấm  để trả lời cuộc gọi đến.

Để kết thúc cuộc gọi, bấm .

Bạn cũng có thể trả lời hoặc kết thúc cuộc gọi bằng cách bấm phím bất kỳ khi chế độ **Multi-key** đang mở.

Tìm chức năng: Bấm  > **Settings** > **In Call Setup** > **Answer Options**

số điện thoại của bạn



Để xem số điện thoại của bạn:

Bấm  > **Settings** > **Phone Status** > **My Tel. Number** hoặc bấm  > .

Để lưu hoặc thay đổi tên và số điện thoại của bạn trong thẻ SIM, bấm phím **VIEW** khi đang xem số điện thoại đó. Nếu bạn không biết số điện thoại của mình, hãy liên hệ với nhà cung cấp dịch vụ.

các tính năng nổi bật

tin nhắn đa phương tiện

Xem trang 60 để biết thêm chi tiết.

gửi tin nhắn đa phương tiện

Tin nhắn đa phương tiện (*Multimedia Messaging Service* - MMS) gồm 1 hoặc nhiều trang, có ký tự và đính kèm các đối tượng multimedia (ảnh chụp, hình ảnh, hoạt hình hoặc âm thanh). Bạn có thể gửi tin nhắn đa phương tiện đến máy điện thoại khác có chức năng MMS.

Tìm chức năng: Bấm  > **Messages > Create > SMS/EMS, MMS hoặc MMS Templates**

Ghi chú: Bạn không thể tải thêm hoặc mở rộng các tin nhắn mẫu MMS Templates. Bạn chỉ có thể sử dụng các mẫu tin nhắn mặc định đã có.

- 1 Bấm các phím để nhập nội dung tin nhắn. Xem trang 37 để biết thêm chi tiết cách nhập liệu.

Để chèn thêm **hình ảnh, âm thanh** hoặc **đối tượng đa phương tiện** khác, bấm **INSERT** hoặc  > **Insert**. Chọn loại file và tên file.

Để chèn thêm trang mới vào tin nhắn, chèn đối tượng đa phương tiện vào trang hiện tại rồi bấm  > **Insert > Add Slide**. Bạn có thể nhập thêm nội dung và các đối tượng khác vào trang mới.

- 2 Khi đã nhập xong tin nhắn, bấm **OK**.
- 3 Chọn một hoặc nhiều người nhận trong mục **Send To**.
Để chọn một tên người, chọn mục đó rồi bấm **ADD**. Lặp lại để chọn tên **Contacts** khác.
Để **nhập số điện thoại mới**, chọn mục **[One Time Entry]** và bấm **SELECT**.
Để **nhập và lưu lại số điện thoại mới**, chọn mục **[New Entry] > Number/Email** và bấm **SELECT**. Số điện thoại mới nhập sẽ được lưu vào danh bạ của thẻ SIM hoặc máy điện thoại.
- 4 Khi đã nhập xong các số điện thoại/ địa chỉ muốn gửi tin nhắn đến, bấm **DONE**. Máy điện thoại sẽ hiển thị mục tiêu đề của tin nhắn.
- 5 Để nhập **tiêu đề** cho tin nhắn, chọn mục **Subject** và bấm **CHANGE**.

- 6 Để yêu cầu mạng di động thông báo **kết quả gửi tin nhắn**, chọn mục **Receipt** và bấm **CHANGE** rồi bấm **ADD**.
- 7 Bấm **SEND** để gửi tin nhắn đa phương tiện.
Để bỏ hoặc lưu tin vừa nhập vào **Draft**, bấm  > **Save to Drafts**.
- 8 Để **hủy** tin đang gửi, mở hộp tin nhận được **Outbox**. Nếu tin nhắn đang được gửi, chọn tin đó và bấm  > **Cancel**.

nhận tin nhắn đa phương tiện



Khi có tin nhắn đa phương tiện hoặc thư gửi tới máy điện thoại của bạn, máy sẽ hiển thị câu nhắc **New Message**, biểu tượng  và tiếng báo.

Bấm **READ** để đọc tin nhắn.

Tin nhắn đa phương tiện mà bạn nhận được có nhiều đối tượng:

- ảnh chụp và hoạt hình sẽ được hiển thị khi bạn xem tin nhắn.
- file âm thanh hoặc phim video sẽ được phát khi thanh điều khiển xuất hiện.

tán gẫu


Chọn **Chat** trong danh mục **Extras** để tán gẫu với bạn bè. Bạn có thể tiết kiệm thời gian bằng cách sử dụng các mẫu tin mẫu, như là **Đang họp** hoặc **Bảo trọng nhé**. Bấm **NEW > Msg: > INSERT**.

máy chụp ảnh

Dùng danh mục để mở máy chụp ảnh:

Tìm chức năng: Bấm  > **Multimedia > Camera**

Màn hình máy chụp ảnh sẽ xuất hiện.

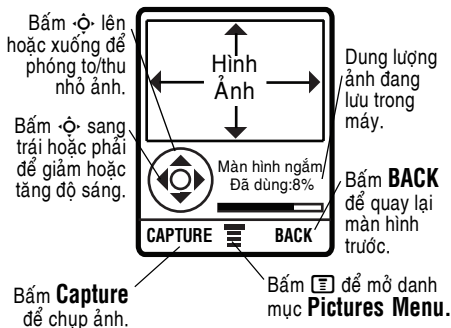

Hướng máy ảnh vào đối tượng muốn chụp rồi:

- 1 Bấm **CAPTURE** để chụp ảnh.
- 2 Bấm **STORE** để mở danh sách các chọn lựa. Làm tiếp bước 4 để lưu ảnh lại.
- 3 Bấm **DISCARD** để bỏ ảnh vừa chụp và quay lại màn hình ngắm.
- 4 Di chuyển đến **Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver** hoặc **Apply as Contacts Entry** rồi bấm **SELECT**.

Ghi chú: Nếu ảnh chụp bị rung, bạn nên chọn tần số khác để chụp. Nếu mục **Flicker** đang được cài đặt ở 50Hz, hãy chuyển thành 60Hz rồi thử chụp lại.

Tìm chức năng: Bấm  > **Multimedia** > **Camera** >  > **Picture Setup** > **Flicker**

Khi đang ở màn hình ngắm ảnh chụp, bấm  để mở danh mục **Picture Menu**:

mục chọn
Go to Pictures Mở thư viện ảnh chụp.
Auto-Timed Capture Hẹn giờ máy điện thoại tự động chụp ảnh sau 5 giây hoặc 10 giây.
Picture Setup Cài đặt việc chụp ảnh. Các cài đặt bao gồm Lighting Conditions, Special Effect, Exposure, Resolution, Shutter Tone, Image Quality , và Flicker .
View Free Space Xem dung lượng bộ nhớ đã sử dụng và còn trống.

Sau khi bấm **Capture**, bạn có thể chọn **Store** để có các mục chọn:

option
Send in Message Máy điện thoại tạo một tin nhắn MMS để chứa ảnh. Hãy tiếp tục soạn tin nhắn MMS và gửi tin đi cùng với ảnh vừa chụp. Bạn cũng có thể chèn thêm một chú thích bằng lời vào tin nhắn.
Store Only Ảnh vừa chụp sẽ được lưu vào mục Pictures .
Apply as Wallpaper Ảnh vừa chụp sẽ được sử dụng làm hình nền.
Apply as Screen Saver Ảnh vừa chụp sẽ được sử dụng làm bảo vệ màn hình.

option
Apply as Contacts Entry Ảnh vừa chụp sẽ được sử dụng làm ảnh nhận dạng trong danh bạ Contacts .


đài FM

Bạn có thể lưu và nghe được tới 9 làn sóng FM khác nhau.

mở đài FM

Tìm chức năng: Bấm  > **Multimedia** > **FM Radio**

Đài FM được tự động mở ở tần số thấp nhất khi bạn mở đài lần đầu tiên. Sau đó, máy điện thoại sẽ ghi nhớ tần số mà bạn mở lần cuối cùng. Bấm **·** phím điều chỉnh âm lượng lên hoặc xuống để tăng hoặc giảm âm lượng loa.

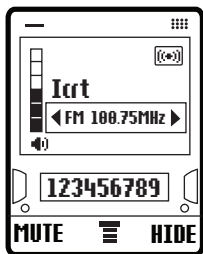

Bấm **Mute** để câm tiếng loa phát.

Ghi chú: Bạn phải dùng tai nghe để nghe đài FM. Nếu bạn mở đài mà không có tai nghe, máy điện thoại sẽ hiển thị câu nhắc **Please Insert The Earpiece.**

Ghi chú: Tai nghe cũng hoạt động như một ăng ten thu sóng FM nên chất lượng nghe đài FM phụ thuộc vào loại tai nghe của bạn. Nếu bạn cắm tai nghe 3,5mm không

phải của Motorola qua đầu đổi adapter (2,5 - 3,5 mm), hoặc dây tai nghe bị cuộn hoặc xoắn lại, chất lượng âm thanh sẽ bị ảnh hưởng.

Ghi chú: Để tiếp tục sử dụng đài FM khi nắp máy đóng, hãy chọn **HIDE** trong màn hình đài FM. Đóng nắp máy hoặc bấm phím kết thúc **END** cũng tắt đài FM.

dò sóng đài FM

- 1 Bấm  > **Multimedia** và di chuyển đến đài FM.
- 2 Bấm  sang trái hoặc phải để tăng hoặc giảm tần số. Mỗi lần bấm phím sẽ tăng hoặc giảm tần số một giá trị bằng 0,05 MHz.
- 3 Bấm và giữ  sang trái hoặc phải để mở chức năng dò đài. Máy điện thoại sẽ tự động dò đài FM kế tiếp. Bạn

vẫn có thể bấm **◀**. Bấm **☰** > **Save Frequency** để lưu làn sóng đã dò được.

nghe làn sóng đã lưu

Bạn có thể lưu lại tối đa 9 làn sóng đài FM.

lưu làn sóng

- 1 Tinh chỉnh tần số muốn lưu bằng cách bấm phím **◀** sang trái hoặc phải.
- 2 Bấm và giữ phím số để lưu làn sóng đó lại với số tương ứng.

chọn làn sóng

Bấm phím số để chọn làn sóng tương ứng.

cài đặt đài FM

Bạn có thể tự dò đài FM, xem và sửa danh sách các tần số.

chọn tần số



- 1 Bấm **☰** và di chuyển đến **Set Frequency**. Bấm **SELECT**.
- 2 Nhập tần số mà bạn cần vào bằng các phím số. Bấm **#** để nhập dấu thập phân. Chữ số thập phân hàng trăm chỉ có thể là 0 hoặc 5.
- 3 Bấm **OK**.

xem và sửa danh sách kênh

- 1 Bấm  và di chuyển đến **Channel List**. Bấm **SELECT**.
- 2 Bấm các phím số hoặc **·** để di chuyển để chọn kênh muốn xem và bấm  > **EDIT**.
- 3 Dùng các phím số để nhập tên kênh **Friendly Name** và tần số **Frequency**.
- 4 Bấm **OK**.

nghe đài FM bằng tai nghe hoặc loa ngoài

Bấm  và di chuyển đến **Speaker**, và bấm **SELECT**. Để nghe đài FM bằng tai nghe, bấm  và di chuyển đến **Earpiece**, và bấm **SELECT**.

Ghi chú: Tai nghe phải được cắm vào máy điện thoại trước nếu bạn muốn nghe đài FM qua loa ngoài.

tắt đài FM

- 1 Bấm  > **Multimedia** > **FM Radio** >  > **FM Radio Off**.

USB di động

Bạn có thể sạc máy điện thoại bằng cách kết nối máy điện thoại với máy tính. Bạn cũng có thể chép các file trong máy điện thoại khi kết nối với máy tính hoặc thiết bị USB khác.

Ghi chú: Hệ điều hành Win95 hoặc mới hơn có hỗ trợ chức năng Mobile USB. Hệ điều hành Mac không hỗ trợ.

Cách sử dụng:

- 1 Cắm đầu dây cáp USB vào bên cạnh trái của máy điện thoại. Máy sẽ hỏi **Connect phone as storage device?**

2 Bấm **Yes** để sử dụng máy điện thoại như một thiết bị lưu trữ USB ngoại vi.

Ghi chú: Khi sử dụng máy điện thoại như là một thiết bị lưu trữ, máy không thể nhận, gọi điện thoại hoặc thực hiện các chức năng khác được. Ngắt kết nối với máy tính để sử dụng máy điện thoại như bình thường.

hoặc

Bấm **No** để sạc máy điện thoại bằng kết nối USB.

Bạn có thể xem các file đã chép vào máy bằng cách bấm  > **Multimedia** > **Pictures** hoặc **Sounds** > **Additional Storage Device**.

Máy điện thoại có 500Kb bộ nhớ dành cho chức năng lưu trữ USB. Kích thước file đa phương tiện tải về được giới hạn ở

mức 100Kb. Giới hạn gửi và nhận hình ảnh là 100Kb.

Ghi chú: Bạn có thể xóa được các file chép thêm. Các file đã cài đặt sẵn trong máy không xóa được.

Ghi chú: Máy điện thoại phải ở chế độ chờ khi kết nối USB và nắp máy phải mở khi sử dụng máy điện thoại như một thiết bị lưu trữ USB ngoại vi.


các chức năng chính

Xem trang 1 về sơ đồ thông tin các phím chức năng.

màn hình

Màn hình ở *chế độ chờ* là màn hình hiển thị khi bạn mở máy điện thoại. Để gọi điện thoại khi đang ở màn hình chờ, bấm số điện thoại và phím .

Ghi chú: Màn hình thực tế của máy điện thoại có thể hơi khác với hình vẽ minh họa, tùy thuộc vào cài đặt của nhà cung cấp dịch vụ.

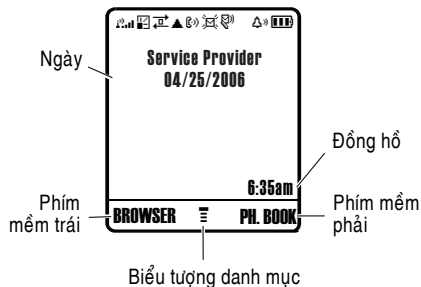


Khi có biểu tượng  hiển thị, bạn có thể bấm  để mở danh mục phụ. Tên của các *phím mềm* cho biết chức năng hiện tại của nó. Bấm phím mềm trái hoặc phải để thực hiện các chức năng đó. Xem trang 1 về vị trí của các phím mềm.

Bấm **Ộ** lên, xuống, sang trái, phải trong màn hình chờ để mở các chức năng cơ bản của máy điện thoại. Bạn có thể chọn hiển thị hoặc dấu các biểu tượng có trong màn hình này.

Tìm chức năng: Bấm **☰** > **Personalise** > **Home Screen** > **Home Keys** > **Icons**

các biểu tượng

Các biểu tượng được hiển thị ở phần trên của màn hình chờ:

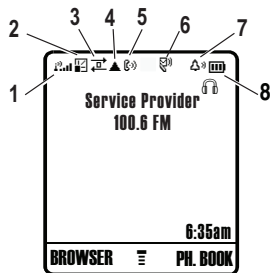

1 Cường độ sóng – Các thanh dọc cho biết cường độ sóng của mạng di động. Bạn không gọi được điện thoại nếu có biểu tượng **⌵** hiển thị.

2 GPRS – Cho biết đang có kết nối tốc độ cao GPRS. Có thể có biểu tượng **PDP đang mở** **⌵** hoặc **Có gói dữ liệu** **⌵**. 

3 Dữ liệu – Cho biết tình trạng kết nối.

⌵ = gói dữ liệu truyền được bảo mật

⌵ = gói dữ liệu truyền không bảo mật

⌵ = kết nối được bảo mật

⌵ = kết nối không bảo mật

⌵ = cuộc gọi bảo mật (*Circuit Switch Data - CSD*)

⌵ = cuộc gọi không bảo mật CSD

4 Chuyển vùng – Biểu tượng chuyển vùng ▲ sẽ xuất hiện khi máy điện thoại của bạn kết nối với mạng di động khác với mạng di động đăng ký.



5 Đường dây đang dùng – Biểu tượng ☎ cho biết bạn đang có cuộc gọi, ☎ cho biết chế độ chuyển cuộc gọi đang mở. Các biểu tượng có thể có cho thẻ SIM chứa hai số điện thoại gồm:



☎1 = đường dây 1 ☎2 = đường dây 2

☎1☎ = đường dây 1 có chuyển cuộc gọi ☎2☎ = đường dây 2 có chuyển cuộc gọi

6 Tin nhắn – Hiển thị khi có tin nhắn mới hoặc bộ nhớ bị đầy. Các biểu tượng gồm:



☐ = tin nhắn mới ☐ = lời nhắn
☐ = tin nhắn & lời ☐ = đang chat
nhắn


7 Kiểu chuông – Cho biết kiểu chuông đang dùng.

☎ = Chuông to ☎ = Rung rồi Chuông
☎ = Chuông nhỏ ☎ = Âm tiếng
☎ = Rung ☎ = Rung & Chuông

8 Dung lượng pin – Cho biết dung lượng pin. Hãy sạc pin khi có câu nhắc **Low/Empty/Charging Battery** hiển thị và tín hiệu báo.

các biểu tượng trạng thái

Các biểu tượng cho biết có cuộc gọi tới, tin nhắn và dung lượng pin.

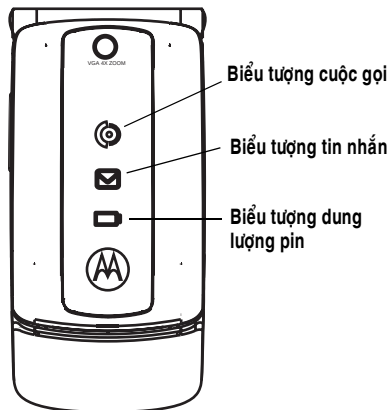

nhắc báo/biểu tượng



cuộc gọi

Biểu tượng nhấp nháy nhanh màu xanh lá cây cho biết có cuộc gọi tới từ người quen, nhấp nháy chậm màu xanh trong vòng 30 phút cho biết có cuộc gọi bị nhỡ từ người quen.

Biểu tượng nhấp nháy nhanh màu cam cho biết có cuộc gọi từ người lạ, nhấp nháy chậm màu cam trong vòng 30 phút cho biết có cuộc gọi bị nhỡ từ người lạ.



tin nhắn

Biểu tượng nhấp nháy nhanh màu dương trong vòng 30 phút cho biết có tin nhắn hoặc lời nhắn mới.



pin

Biểu tượng nhấp nháy cam khi pin yếu và nhấp nháy liên tục khi pin đang sạc.

Ghi chú: Bạn có thể tắt các biểu tượng trạng thái. Bấm  > **Settings** > **Initial Setup** > **Status Indicator** > **Off**

danh mục


Bấm  ở màn hình chờ để mở danh mục chính.

Chức năng đang được chọn trong danh mục.

Chọn mục đánh dấu

Di chuyển lên, xuống, trái, phải.

Bấm để chọn mục đang đánh dấu



Thoát khỏi danh mục chính.


Thoát ra mà không thay đổi gì.

Các biểu tượng trong danh sách sau có thể được hiển thị, tùy theo sự đăng ký sử dụng và tính năng của mạng di động.

biểu tượng	chức năng	biểu tượng	chức năng
	Contacts		Web Access
	Recent Calls		Multimedia
	Messages		Personalise
	Extras		Settings
	Games		

chọn chức năng

Có một số chức năng cần bạn chọn giá trị có trong danh sách.

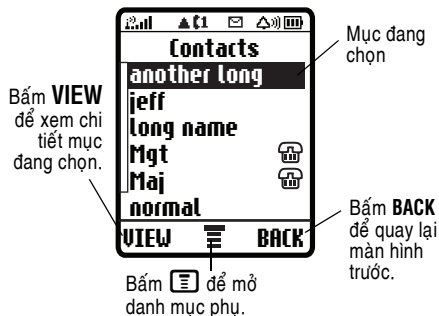

- Trong danh sách có đánh số, bấm phím số tương ứng để chọn mục của danh sách.
- Trong danh sách ký tự, bấm phím số liên tục để di chuyển đến vị trí ở gần mục cần tìm nhất.
- Khi một mục có nhiều giá trị khác nhau, bấm ·Ộ· sang trái hoặc phải để duyệt và chọn giá trị mà bạn cần.
- Khi một mục có thể có nhiều giá trị khác nhau, bấm phím số để nhập giá trị.

- Bấm ·Ộ· lên hoặc xuống để di chuyển trong danh sách.

nhập liệu

Có nhiều chức năng yêu cầu bạn phải nhập liệu vào.



chọn kiểu nhập liệu

Có nhiều kiểu nhập liệu khác nhau giúp bạn nhập tên, số và tin nhắn rất dễ dàng. Kiểu nhập mà bạn chọn được giữ nguyên cho đến khi bạn chọn kiểu khác.

Bấm [#] khi đang ở màn hình nhập liệu bất kỳ để chọn một trong các kiểu nhập liệu sau: .

- Primary** Kiểu nhập liệu chính (xem cách cài đặt ở dưới).
- Numeric** Chỉ nhập số (xem trang 39).
- Symbol** Chỉ nhập biểu tượng (xem trang 39).

cài đặt kiểu nhập liệu

Để chọn kiểu nhập liệu chính **Primary** và phụ **Secondary**, bấm [Menu icon] > **Entry Setup** khi ở trong màn hình nhập liệu và chọn **Primary setup** hoặc **Secondary setup**.

kiểu nhập liệu iTAP®

Bấm **[#]** khi đang ở trong màn hình nhập ký tự để chọn kiểu nhập liệu iTAP. Nếu bạn không thấy có biểu tượng **[📱]** hoặc **[📞]**, bấm **[≡] > Entry Setup** để chọn iTAP là kiểu nhập liệu chính hoặc phụ.

Kiểu nhập liệu iTAP giúp bạn chỉ cần bấm phím một lần cho mỗi chữ cái khi nhập liệu. Phần mềm iTAP tổ hợp các phím bấm của bạn thành các từ thông dụng và đoán từ phù hợp mỗi khi bạn bấm phím.

Ví dụ, nếu bạn bấm **[7] [7] [6] [4]**, màn hình sẽ hiển thị:



- Nếu bạn muốn nhập từ khác, (ví dụ **Progress**), tiếp tục bấm phím để nhập các ký tự còn thiếu.
- Bấm phím số **[1]** để nhập dấu câu hoặc các ký tự khác.

kiểu nhập liệu tap

Bấm **[#]** khi đang ở trong màn hình nhập ký tự để chọn kiểu nhập liệu TAP. Nếu bạn không thấy có biểu tượng **1** hoặc **2**,


bấm **[Menu]** > **Entry Setup** để chọn kiểu nhập liệu **TAP** là kiểu nhập liệu chính hoặc phụ.

Kiểu nhập **TAP** hiển thị lần lượt các chữ cái và số đại diện cho 1 phím khi bạn bấm liên tục phím đó. Lặp lại động tác này để nhập từng ký tự một.

Ví dụ khi bạn bấm phím số **[8]** một lần, máy điện thoại hiển thị:

Ký tự được
nhập tại vị trí
con trỏ.

Bấm **OK** để
chấp nhận và
lưu đoạn văn
bản lại.

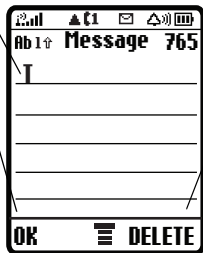

Bấm
DELETE để
xóa ký tự ở
bên trái con
trỏ.

Sau 2 giây, ký tự nhập vào được chấp nhận và con trỏ di chuyển sang vị trí tiếp theo.

nhập số

Trong màn hình nhập liệu, bấm **[#]** cho tới khi có biểu tượng **12** hiển thị trên màn hình.

Bấm các phím số để nhập giá trị mà bạn cần. Khi đã nhập xong, bấm **[#]** để chuyển sang kiểu nhập liệu khác.

nhập biểu tượng

Trong màn hình nhập liệu, bấm **[#]** cho đến khi thấy biểu tượng **@** hiển thị.

Bấm các phím số để duyệt qua các biểu tượng tương ứng. Chọn biểu tượng muốn sử dụng rồi bấm **SELECT**.

âm lượng

Bạn có thể điều chỉnh âm lượng loa khi đang nói chuyện bằng cách bấm sang phải/lên để tăng âm lượng hoặc sang trái/xuống để giảm âm lượng. Bạn cũng có thể điều chỉnh âm lượng bằng cách bấm phím điều chỉnh âm lượng.

Hướng dẫn: Khi đang nói chuyện điện thoại, bạn có thể chuyển sang chế độ câm tiếng bằng cách bấm  > **Mute**.

phím di chuyển

Bấm *phím di chuyển*  để di chuyển lên, xuống, sang trái hoặc phải và đi đến mục mà bạn cần.



loa ngoài rảnh tay

Khi bạn mở loa ngoài của máy điện thoại, bạn có thể nói chuyện điện thoại mà không cần phải áp máy vào tai.

Bấm **SPKR ON** để mở loa ngoài khi đang nói chuyện điện thoại. Máy điện thoại hiển thị câu **SPKR OFF** cho đến khi bạn tắt hoặc kết thúc cuộc gọi.

Lưu ý: Loa ngoài sẽ bị tắt khi bạn kết nối máy điện thoại với bộ rảnh tay dùng trong xe hơi hoặc tai nghe.

mã khóa và mật mã

Bạn đầu mật **mã mở khóa** của máy điện thoại mặc định là **1234** và mật mã bảo mật là **000000**. Nếu nhà cung cấp dịch vụ của bạn chưa thay đổi các số này, bạn nên thay đổi chúng bằng cách:

Bấm  > **Settings** > **Security** > **New Passwords**

Bạn cũng có thể đổi mã số **SIM PIN** của thẻ SIM hoặc mật mã ngăn chặn cuộc gọi nếu cần.

Nếu bạn quên mã mở khóa: khi câu nhắc **Enter Unlock Code** được hiển thị, hãy thử nhập vào     hoặc 4 số cuối của số điện thoại của bạn. Nếu không được, bấm  và nhập vào mật mã bảo vệ để mở khóa máy điện thoại.

Nếu bạn quên các mật mã khác: nếu bạn quên mật mã bảo vệ, mã SIM PIN,

mã PIN2, hoặc mật mã ngăn chặn cuộc gọi, hãy liên hệ nhà cung cấp dịch vụ.

xem dung lượng pin

Để xem dung lượng pin hiện tại:

Bấm  > **Settings** > **Phone Status** > **Battery Meter**.

cài đặt máy điện thoại

kiểu chuông

Máy điện thoại đổ chuông hoặc rung báo cho bạn có cuộc gọi tới hoặc sự kiện khác. Bạn có thể chọn một trong các kiểu chuông sau: **Loud Ring**, **Soft Ring**, **Vibrate**, **Vibrate & Ring**, **Vibrate then Ring**, và **Silent**.

 = Chuông to	 = Rung rồi Chuông
 = Chuông nhỏ	 = Âm tiếng
 = Rung	 = Rung & Chuông

Kiểu chuông hiện tại được hiển thị ở góc trên của màn hình.

Để chọn kiểu chuông:

Tìm chức năng: Bấm  > **Settings**
> **Ring Style** > **Style** > *tên kiểu*

đổi kiểu chuông

Bạn có thể thay đổi kiểu chuông báo có cuộc gọi đến hoặc các sự kiện khác. Các thay đổi của bạn được lưu vào kiểu chuông hiện tại.

Tìm chức năng: Bấm  > **Settings**
> **Ring Style** > **Detail** > *tên kiểu muốn dùng*
> **Change** > *loại chuông báo.*

ngày & giờ

Để cập nhật ngày giờ trong máy điện thoại:

Tìm chức năng: Bấm  > **Settings**
> **Initial Setup** > **Time and Date**

Ghi chú: Để chọn hiển thị đồng hồ dạng kim hoặc số trên màn hình, bấm  > **Personalise** > **Home Screen** > **Clock Set**.

hình nền

Bạn có thể cài một bức tranh, ảnh chụp, hay hoạt hình thành hình ảnh nền cho màn hình chờ.

Tìm chức năng: Bấm  > **Personalise**
> **Wallpaper**

Chọn một trong các mục chọn sau.

mục chọn	
Set Layout	Chọn Center để hiển thị ảnh giữa màn hình, Tile để hiển thị nhiều ảnh cho đầy màn hình, Fit-to-screen để phóng to ảnh vừa màn hình.
Picture	Chọn ảnh làm hình nền.

bảo vệ màn hình

Bạn có thể cài một bức tranh, ảnh chụp, hay hoạt hình làm bảo vệ màn hình. Bảo vệ màn hình sẽ được hiển thị khi máy điện thoại không hoạt động sau một khoảng thời gian đã chọn.

Hướng dẫn: Chức năng này giúp bảo vệ màn hình nhưng lại tốn pin. Để tiết kiệm pin, hãy tắt chế độ bảo vệ màn hình.

Tìm chức năng: Bấm  > **Personalise**
> **Screen Saver**

màn hình hiển thị

Để chọn màu sắc hiển thị của biểu tượng, mục chọn và phím mềm của máy điện thoại:

Bấm  > **Personalise** > **Color Setting**.

đèn nền

Để tiết kiệm pin, máy điện thoại tắt đèn nền khi bạn không sử dụng máy điện thoại. Đèn nền được mở khi bạn bấm phím bất kỳ. Để chọn độ dài thời gian máy điện thoại mở đèn màn hình:

Tìm chức năng: Bấm  > **Settings** > **Initial Setup** > **Backlight**

cách trả lời cuộc gọi

Bạn có nhiều cách khác nhau để trả lời cuộc gọi đến. Để mở hoặc tắt một cách trả lời chế độ đến:

Tìm chức năng: Bấm  > **Settings** > **In-Call Setup** > **Answer Options**.

mục chọn

Multi-key On	Trả lời cuộc gọi bằng cách bấm phím bất kỳ hoặc mở nắp máy.
---------------------	---

Multi-key Off	Trả lời cuộc gọi bằng cách bấm phím  .
----------------------	---

Open to answer	Trả lời cuộc gọi bằng cách mở nắp máy.
-----------------------	--

lời chào

Bạn có thể cài đặt lời chào để hiển thị khi bạn mở máy điện thoại:

Tìm chức năng: Bấm  > **Personalise** > **Greeting**.

chế độ rảnh tay

Sử dụng tai nghe giúp bạn dùng máy điện thoại mà không cần phải cầm máy.

Ghi chú: Việc sử dụng các thiết bị không dây và phụ kiện có thể bị cấm hoặc hạn chế ở một số nơi. Luôn tuân theo các quy định và luật lệ về việc sử dụng các thiết bị này.

Tìm chức năng: Bấm  > **Settings**
> **Headset** > **Auto Answer** > *kiểu muốn sử dụng*

tính năng về cuộc gọi

Chương này mô tả các tính năng liên quan đến việc gọi điện thoại và trả lời cuộc gọi.

các cuộc gọi vừa qua

Máy điện thoại lưu lại danh sách các cuộc gọi đi và đến, cả các cuộc gọi không kết nối được. Các cuộc gọi gần nhất được hiển thị ở đầu danh sách. Cuộc gọi cũ nhất sẽ bị xóa đi khi có cuộc gọi mới được thêm vào.

Hướng dẫn: Bấm  khi máy đang ở chế độ chờ để mở danh sách các cuộc gọi đi vừa qua.

Tìm chức năng: Bấm  > **Recent Calls**

- 1 Bấm  để di chuyển đến **Received Calls** hoặc **Dialed Calls**.
- 2 Bấm **SELECT** để chọn danh sách.
- 3 Bấm  để di chuyển trong danh sách. Biểu tượng ✓ cho biết bạn đã kết nối được với số điện thoại này.
- 4 Bấm  để gọi cho số điện thoại đó.
- 5 Bấm **VIEW** để xem chi tiết về cuộc gọi.

Để xem danh sách các cuộc gọi đi **Dialed Calls**, bấm . Trong danh mục có các mục chọn sau:

mục chọn

Store	Tạo mục từ trong danh bạ với số điện thoại vừa chọn được điền vào trường No.
--------------	---

mục chọn	
Delete	Xóa số điện thoại đang chọn.
Delete All	Xóa tất cả các số điện thoại có trong danh sách.
Hide ID	Dấu số điện thoại trong lần gọi tiếp theo.
Send Message	Gửi tin nhắn.
Add Digits	Thêm số vào sau số điện thoại.
Attach Number	Chèn thêm số từ danh bạ hoặc danh sách các cuộc gọi vừa qua.

gọi lại cho một số điện thoại

- 1 Bấm  để mở danh sách các cuộc gọi đi vừa qua **Dialled Calls**.
- 2 Bấm  để di chuyển đến số điện thoại muốn gọi lại.
- 3 Bấm  để gọi cho số điện thoại đó. Nếu bạn nghe thấy tín hiệu bận và có câu nhắc **Call Failed, Number Busy**, bấm để gọi lại một lần nữa.

trả lời cuộc gọi

Máy điện thoại lưu lại các cuộc gọi bị nhỡ và hiển thị **X Missed Calls**, với X là số lượng cuộc gọi bị nhỡ.

- 1 Bấm **VIEW** để mở danh sách các cuộc gọi đến vừa qua **Received Calls**.

- 2 Bấm  để di chuyển đến số điện thoại muốn gọi.
- 3 Bấm  để gọi cho số điện thoại đó.

sổ ghi

Máy điện thoại lưu các số mà bạn nhập từ bàn phím lần gần đây nhất trong bộ nhớ, gọi là sổ ghi (notepad). Các số này có thể là số điện thoại mà bạn gọi lần gần đây nhất hoặc là số điện thoại mà bạn nhập vào nhưng không gọi đi. Để lấy lại số đang lưu trong sổ ghi, hãy:

Tìm chức năng: Bấm  > **Recent Calls**
> **Notepad**

Bấm  để gọi cho số điện thoại đó.

hoặc

Bấm **STORE** để tạo mục từ trong danh bạ với số vừa nhập điền vào trường **No.**

chế độ chờ hoặc câm tiếng

Khi bạn đang có cuộc gọi:

Bấm  > **Hold** để chuyển cuộc gọi hiện tại sang chế độ chờ.

Bấm  > **Mute** để câm tiếng cuộc gọi hiện tại. Bấm tiếp một lần nữa để mở tiếng cho cuộc gọi.

cuộc gọi đang chờ



Khi bạn đang nói chuyện, có thông báo cho biết có cuộc gọi khác đang gọi bạn.

- 1 Bấm  để trả lời cuộc gọi mới.
- 2 Bấm **SWITCH** để chuyển giữa các cuộc gọi.

hoặc

Bấm **LINK** để kết nối 2 cuộc gọi lại.
hoặc

Bấm  > **End Call On Hold** để ngắt cuộc gọi đang chờ.

Để mở hoặc tắt chế độ chờ cuộc gọi:

Tìm chức năng: Bấm  > **Settings**
> **In Call Setup** > **Call Waiting**

số của người gọi



Chức năng *Calling line identification* - *Caller ID* hiển thị số điện thoại gọi đến trên màn hình ngoài và màn hình trong của máy điện thoại.

Máy điện thoại hiển thị tên của người gọi đến nếu trong danh bạ có thông tin về người đó hoặc câu **Incoming Call** nếu không có thông tin này.

Bạn có thể hiển thị hoặc dấu **số điện thoại của bạn** cho lần các gọi sau.

Tìm chức năng: Bấm  > **Settings**
> **In Call Setup** > **My Caller ID**

gọi khẩn cấp

Nhà cung cấp dịch vụ có một hoặc nhiều số gọi khẩn cấp để bạn gọi khi cần (như là 911), ngay cả khi máy điện thoại của bạn bị khóa, hoặc khi không có thẻ SIM.

Ghi chú: Số điện thoại để gọi khẩn cấp có thể khác nhau, tùy theo mỗi nước. Số khẩn cấp cài sẵn trong máy điện thoại của bạn có thể không dùng được ở mọi chỗ, và có khi cuộc gọi khẩn cấp không thực hiện được do mạng di động, môi trường hoặc bị nhiễu.

- 1 Bấm các phím số nhập số điện thoại khẩn cấp vào.
- 2 Bấm  để gọi cho số điện thoại đó.

gọi quốc tế



Nếu bạn có đăng ký sử dụng dịch vụ điện thoại quốc tế, bấm và giữ phím  để nhập vào mã truy cập quốc tế (+) của nước mà bạn đang ở. Tiếp tục bấm mã nước, ví dụ + để gọi sang Anh, + để gọi sang Pháp, ... và số điện thoại.

quay số bằng một phím bấm

Để gọi cho các số điện thoại có mã số từ 1 đến 9 trong danh bạ điện thoại, bấm và giữ phím số tương ứng trong khoảng 1 giây. Nếu phím bấm chưa được gán một

số điện thoại nào, máy sẽ yêu cầu bạn gán số điện thoại cho phím đó.

Tìm chức năng: Bấm  > **Settings** > **Initial Setup** > **1-Touch Dial** > **Phone, SIM** hoặc **Fixed Dial**

Ghi chú: Xem thêm phần Tính năng cao cấp về cuộc gọi ở trang 54 về cách sử dụng Quay số cố định.

Bạn có thể gọi cho các số điện thoại nằm ở vị trí từ số 1 đến số 9 trong thẻ SIM bằng cách bấm phím số tương ứng.

Bấm và giữ phím số trong khoảng 1 giây.

Tìm chức năng: Bấm  > **Contacts**, chọn một số điện thoại rồi bấm  > **Edit** > **Speed No.**

thư thoại



Mạng di động lưu lại các lời nhắn gửi đến cho bạn trong hộp thư thoại. Để nghe nghe các lời nhắn này, bạn phải gọi cho số điện thoại của hộp thư thoại.

Hãy liên hệ với nhà cung cấp dịch vụ để biết thêm chi tiết.

lưu số điện thoại của hộp thư thoại

Tìm chức năng: Bấm  > **Messages** >  > **Voicemail Setup**

- 1 Bấm phím số để nhập số điện thoại.
- 2 Bấm **SAVE** để lưu số đó lại.

nghe lời nhắn

Khi bạn **nhận được** một lời nhắn, máy điện thoại hiển thị thông báo

1 New Message và biểu tượng có lời nhắn mới (một số mạng di động hiển thị biểu tượng này khi bạn có lời nhắn, bất kể mới hay cũ). Nếu bạn xóa hết lời nhắn, biểu tượng sẽ biến mất.

Để nghe lời nhắn của bạn:

Tìm chức năng: Bấm  > **Messages** > **Voicemail**

Máy điện thoại sẽ gọi cho số điện thoại của hộp thư thoại. Nếu trong máy chưa có số điện thoại của hộp thư thoại, máy điện thoại sẽ yêu cầu bạn nhập vào.

chèn ký tự điều khiển vào số điện thoại

Bạn có thể chèn các ký tự đặc biệt cũng như các chữ số vào số điện thoại để gọi đi.

mục chọn	
Tạm ngưng (p)	Máy sẽ chờ đến khi cuộc gọi được kết nối, rồi mới quay các số tiếp theo.
Chờ (w)	Máy sẽ chờ cho đến khi cuộc gọi được kết nối rồi yêu cầu bạn xác nhận để quay các số tiếp theo.

Bạn có thể chèn ký tự tạm ngưng hoặc chờ ngay cả khi đang thực hiện cuộc gọi. Để chèn ký tự tạm ngưng trước khi cuộc gọi được kết nối, bấm và giữ phím **[*]**. Khi ký tự **p** xuất hiện, chọn nó để chèn ký

tự tạm ngưng. Nếu bạn muốn chèn ký tự chờ, tiếp tục giữ phím **[*]**. Ký tự **w** sẽ xuất hiện để bạn chọn.

các tính năng khác

tính năng cao cấp về cuộc gọi

tính năng	
hội đàm	Sau khi đã kết nối được với cuộc gọi đầu tiên, gọi cho số tiếp theo, bấm  rồi bấm LINK . 
chèn số điện thoại	Để chèn thêm mã vùng hoặc các số đầu cho một số điện thoại trong danh bạ, bấm  > Attach number . 

tính năng	
quay số nhanh	Gọi nhanh cho một số điện thoại có trong danh bạ:  Nhập mã số quay nhanh, bấm  , rồi bấm  để gọi điện thoại. Hướng dẫn: Nếu bạn quên mất mã số quay nhanh của một số điện thoại, bấm  > Contacts , di chuyển đến số điện thoại và bấm VIEW . 
chuyển cuộc gọi	Chọn hoặc hủy bỏ việc chuyển cuộc gọi:   > Settings > Call Divert

tính năng		
ngăn chặn cuộc gọi	Hạn chế cuộc gọi đến hoặc đi:  > Settings > Security > Call Barring	
đổi số điện thoại	Nếu bạn có thẻ SIM hỗ trợ 2 số điện thoại, bạn có thể đổi số điện thoại dùng để gọi và nhận điện thoại.  > Settings > Phone Status > Active Line Biểu tượng đường dây đang dùng cho biết số điện thoại đang hoặc kích hoạt (xem trang 33).	

tính năng		
đèn Lantern	 > Settings > Lantern hoặc  > Extras > Lantern Tính năng đèn Lantern giúp bạn dùng màn hình máy điện thoại như là một đèn flash. Bấm phím bất kỳ để tắt đèn.	
quay số cố định	Khi bạn mở chế độ quay số cố định, bạn chỉ có thể gọi cho các số điện thoại lưu trong danh sách mà thôi. Để mở hoặc tắt chế độ quay số cố định:  > Settings > Security > Fixed Dial	

tính năng	
quay số cố định	Để dùng danh sách quay số cố định:  > Extras > Dialing Services > Fixed Dial
gọi nhanh	Để gọi nhanh cho các số điện thoại dịch vụ đã cài sẵn trong máy điện thoại:   > Extras > Dialing Services > Quick Dial
tín hiệu DTMF	Để chọn tín hiệu Long DTMF hoặc Short DTMF:  > Settings > Initial Setup > DTMF

danh bạ điện thoại

tính năng	
tạo mục từ mới	Để tạo mục từ mới trong danh bạ điện thoại:  > Contacts >  > New > Number > Store To. Phím tắt: Nhập số điện thoại từ bàn phím rồi bấm STORE. Ghi chú: Số điện thoại lưu trong thẻ SIM sẽ đi cùng thẻ SIM. Khi bạn thay thẻ SIM, bạn sẽ không có số điện thoại đó. Số điện thoại lưu trong máy điện thoại sẽ đi theo máy. Khi bạn thay thẻ SIM mới, bạn vẫn có số điện thoại đó.

tính năng

tạo mục từ mới

Ghi chú: Máy điện thoại có thể chứa tối đa 100 số điện thoại. Số lượng số điện thoại chứa trong thẻ SIM phụ thuộc vào từng loại thẻ (tối đa là 255 số).

Hướng dẫn: Một số mối liên hệ của bạn có nhiều hơn một số điện thoại.

Khi tạo mục từ, chọn **More** để chọn lưu thêm số điện thoại mới cho cùng tên người.

tính năng

tải nhạc chuông

Bạn có thể dùng chức năng này để gửi nhạc chuông từ một máy điện thoại này sang máy khác:



 > **Messages** > **Create**
> **MMS** > **Insert** > **Sound**

Bạn có thể tải nhạc chuông về bằng trình duyệt **Web Browser**. Khi nhận được một tin nhắn MMS từ người khác, bạn có thể lưu lại nhạc chuông có trong tin nhắn. Bạn cũng có thể gửi nhạc chuông bằng tin nhắn MMS.

tính năng	
tải nhạc chuông	Ghi chú: bạn chỉ có thể tải nhạc mp3 bằng trình duyệt Browser. Ghi chú: Giới hạn bộ nhớ của nhạc chuông tải về là 1Mb.

tính năng	
gọi điện thoại	Để gọi cho một số điện thoại có trong danh bạ:  > Contacts, di chuyển đến số điện thoại, bấm  để gọi. Phím tắt: Trong danh bạ, bấm phím số một hoặc nhiều lần để di chuyển đến mục từ có tên bắt đầu bằng ký tự tương ứng nhất với phím vừa bấm. Bạn có thể nhập tối đa tới 12 ký tự để tìm tên.

tính năng	
phân nhóm số điện thoại	 > Contacts > <i>số điện thoại muốn phân nhóm</i>  > Categories Bạn có thể phân số điện thoại vào nhóm All, Business, Personal, General, VIPs hoặc nhóm do bạn tự tạo.

tính năng	
xem danh bạ theo nhóm	 > Contacts > <i>số điện thoại muốn phân nhóm</i>  > Categories Bạn có thể xem tất cả các số điện thoại trong nhóm All hoặc trong từng nhóm Business, Personal, General, VIPs và nhóm do bạn tự tạo.
tìm số điện thoại	Bấm phím số một hoặc nhiều lần để di chuyển đến tên gần với ký tự vừa nhập nhất. Bấm tiếp phím thứ 2 để di chuyển đến tên có gần với hai ký tự vừa nhập nhất. Tiếp tục như vậy, bạn có thể nhập tối đa 12 ký tự để tìm tên.

tính năng	
sắp xếp danh bạ	Chọn cách sắp xếp danh bạ khi hiển thị:  > Contacts >  > Setup > Sorting By > <i>trật tự</i>
chép số điện thoại	Để chép số điện thoại vào thẻ SIM hoặc từ thẻ SIM vào máy điện thoại:  > Contacts, chọn số điện thoại muốn chép, bấm  > Copy Entries > To

tính năng	
chép nhiều số điện thoại	Để chép nhiều số điện thoại giữa thẻ SIM và máy điện thoại:  > Contacts, chọn số điện thoại muốn chép, bấm  > Copy Entries, bấm CHANGE, chọn số điện thoại khác, bấm ADD. Lặp lại để chọn số khác nếu cần rồi bấm DONE.

tính năng

cài đặt ảnh nhận dạng cho số điện thoại Khi có cuộc gọi đến, ảnh tương ứng với số điện thoại gọi đến sẽ được hiển thị trên màn hình.

 > **Contacts** > *số điện thoại*

 > **Edit** > **Picture**

Ghi chú: Các số điện thoại lưu trong thẻ SIM không có mục **Picture**.

tin nhắn

Xem trang 22 về các tính năng cơ bản về tin nhắn đa phương tiện.

tính năng

gửi tin nhắn dạng văn bản  > **Messages** > **Create** > **SMS/EMS** 

gửi tin nhắn đa phương tiện  > **Messages** > **Create** > **MMS** 
Ghi chú: Bạn chỉ có thể gửi và nhận tin nhắn đa phương tiện có kích thước nhỏ hơn 100Kb.

gửi mẫu tin nhanh  > **Messages** > **Quick Notes** 

tính năng	
gửi mẫu tin nhắn đa phương tiện có sẵn	Mở mẫu tin đối tượng đa phương tiện có các đối tượng đa phương tiện đã cài sẵn:  > Messages > Create > MMS Templates
xem tin nhắn mới	Để xem tin nhắn văn bản hoặc đa phương tiện mới nhận được: Bấm READ khi có thông báo New Message hiển thị.

tính năng	
xem tin nhắn cũ	Để xem tin nhắn cũ:  > Messages > Inbox Bấm  để thực hiện các tác vụ có liên quan đến tin nhắn.
xem tin nhắn đã gửi	Để xem tin nhắn đã gửi:  > Messages > Outbox Các tin nhắn đã gửi được lưu trong Outbox.
soạn tin nháp	Lưu lại tin nhắn đang soạn vào thư mục Draft để sửa lại sau:  > Messages > Draft

tính năng	
tin nhắn từ trình duyệt	Xem tin nhắn nhận được từ trình duyệt:   > Messages > Browser Msgs
tin nhắn từ tổng đài	Xem tin nhắn đăng ký nhận từ tổng đài:   > Messages > Info Services

tính năng	
gửi và nhận vCard	Bạn có thể gửi và nhận vCard bằng cách đính kèm vào tin nhắn MMS (vCard là phần đính kèm). Bạn cũng có thể nhận được vCard từ máy điện thoại khác thông qua tin nhắn MMS. Bạn có thể lưu lại vCard từ tin nhắn MMS bằng cách mở vCard đính kèm trong tin nhắn.  > Messages > Create > MMS hoặc MMS Templates > Insert > Attachment > [New Attachment] > vCard Ghi chú: Để chọn kiểu nhập liệu, bấm  .

tán gẫu

tính năng		
bắt đầu tán gẫu	 > Extras > Chat  > New Chat	
nhận đề nghị tán gẫu	Bấm ACCEPT để chấp nhận hoặc IGNORE để từ chối.	
kết thúc cuộc tán gẫu	Khi đang tán gẫu, bấm:  > End Chat	

trình duyệt (wap 2.0)

tính năng		
chạy trình duyệt	 > WebAccess > Start Browser	
mở mục ghi dấu	 > WebAccess > Web Shortcut	

tính năng		
mở URL	 > WebAccess > Go to URL	
truy cập internet	 > WebAccess > Web Session	
mở trang web đã lưu	 > WebAccess > Stored Pages	
xem/mở các trang đã xem	 > WebAccess > History	
thay đổi cài đặt	 > WebAccess > General Setting	
tắt trình duyệt	Bấm khi đang ở trong màn hình WebAccess và chọn 4. Exit hoặc  > OK.	

cá nhân hóa

tính năng	
ngôn ngữ	Chọn ngôn ngữ hiển thị:  > Settings > Initial Setup > Language
cuộn trong danh mục	Cài đặt việc thanh chọn sẽ dừng lại ở cuối danh mục hay nhảy về đầu:  > Settings > Initial Setup > Scroll
âm lượng chuông	 > Settings > Ring Style > <i>style Detail</i> > Ring Volume
âm lượng tiếng bấm bàn phím	 > Settings > Ring Style > <i>style Detail</i> > Key Volume

tính năng	
hiển thị đồng hồ	Để hiển thị đồng hồ dạng số hoặc dạng kim trên màn hình chờ:  > Personalise > Home Screen > Clock Set
hiển thị danh mục	Để hiển thị danh mục chính theo dạng biểu tượng hoặc tên:  > Personalise > Main Menu > View
danh mục chính	Để thay đổi thứ tự các chức năng trong danh mục chính:  > Personalise > Main Menu > Reorder

tính năng	
hiển thị/ dấu biểu tượng danh mục	Để hiển thị hoặc dấu các biểu tượng chức năng trong màn hình chờ:  > Personalise > Home Screen > Home Keys > Icons
thay đổi phím mềm	Để thay đổi chức năng của phím mềm và phím di chuyển trong màn hình chờ:  > Personalise > Home Screen > Home Keys

tính năng	
phím tắt	Để tạo phím tắt cho danh mục: Chọn mục muốn tạo phím tắt rồi bấm và giữ phím  Cách dùng phím tắt: Bấm  rồi bấm số của phím tắt.
cài đặt lại tất cả	Cài đặt lại tất cả, ngoại trừ mã mở khóa, mã bảo mật và đồng hồ đo thời gian sử dụng:  > Settings > Initial Setup > Master Reset Ghi chú: Bạn phải nhập vào mã số bảo vệ để cài đặt lại tất cả máy điện thoại.

tính năng

xóa tất cả Khởi tạo lại tất cả các cài đặt và xóa tất cả các thông tin nhập vào (như là hình nền, hoạt hình, âm thanh).

Cảnh báo: Mục này sẽ xóa tất cả các **thông tin do người dùng nhập vào** (gồm cả danh bạ và sổ hện) hoặc **tải về** (gồm cả hình ảnh và tiếng chuông) đang lưu trong máy điện thoại. Thông tin không thể phục hồi được sau khi bị xóa. Tất cả các cài đặt được khởi tạo lại giá trị mặc định, ngoại trừ mã mở khóa, mã bảo

tính năng

mật và đồng hồ đo thời gian sử dụng.

 > **Settings > Initial Setup > Master Clear**

Bạn phải nhập vào mã số bảo mật (000000) để xóa tất cả máy điện thoại.

thời gian gọi và cước phí

Thời gian kết nối là khoảng thời gian từ khi bạn kết nối với mạng di động cho đến khi bạn bấm phím . Thời gian này gồm cả thời gian chờ chuông và nghe tín hiệu báo bận.

Thời gian kết nối được theo dõi ở máy điện thoại có thể khác với thời gian trong hóa đơn tính cước của bạn. Vui lòng liên hệ trực tiếp với nhà cung cấp dịch vụ để biết thêm chi tiết tính cước.

tính năng	mô tả
đồng hồ đo cuộc gọi	Để xem đồng hồ đo cuộc gọi:  > Recent Calls > Call Times 

tính năng	mô tả
đồng hồ trong cuộc gọi	Để xem thời gian khi đang có cuộc gọi:  > Settings > In Call Setup > In Call Timer 
đồng hồ đo cước phí	Để xem đồng hồ đo cước phí:  > Recent Calls > Call Cost 
cài đặt đồng hồ đo cước phí	Để cài đặt giới hạn cước phí:  > Settings > In Call Setup > Call Cost Setup 
đồng hồ đo dữ liệu	Để xem thời gian truyền dữ liệu:  > Recent Calls > Data Times 

tính năng	mô tả
khối lượng dữ liệu	Để xem khối lượng dữ liệu đã truyền:   > Recent Calls > Data Volumes

tính năng rảnh tay

Ghi chú: Việc sử dụng điện thoại di động và các phụ kiện có thể bị cấm hoặc hạn chế ở một vài nơi. Luôn tuân thủ các luật lệ và qui định về việc sử dụng này.

tính năng	
loa ngoài	Chuyển cuộc gọi ra loa ngoài khi đang có cuộc gọi:  Bấm SPKR ON và SPKR OFF để mở hoặc tắt loa.

tính năng	
tự động trả lời	Để máy điện thoại tự động trả lời khi lắp máy với tai nghe hoặc bộ rảnh tay trên xe hơi:   > Settings > Headset > Auto Answer

mạng di động

tính năng	
cài đặt mạng di động	Để xem thông tin của mạng di động và thay đổi cài đặt:   > Settings > Network

quản lý thông tin cá nhân

tính năng	
cài đặt nhắc báo	 > Extras > Alarm Clock
tắt nhắc báo	Khi có nhắc báo: Để tắt nhắc báo, bấm DISABLE . Để tạm ngưng nhắc báo trong vài phút, bấm SNOOZE .
máy tính	 > Extras > Calculator

tính năng	
qui đổi tiền tệ	 > Extras > Calculator  > Exchange Rate Nhập vào tỉ giá ngoại tệ, bấm OK . Nhập số tiền muốn đổi vào và bấm  > Convert CURRENCY .
lịch	 > Extras > Calendar Dùng để ghi nhớ các sự kiện quan trọng và tạo nhắc báo.

tính năng

đồng hồ bấm giờ

 > Extras > Stop Watch

Bấm **START** để bắt đầu tính giờ, bấm **STOP** để ngưng, bấm **RESET** để xóa đồng hồ.

Ghi chú: Sau khi đồng hồ đã chạy, bạn có thể bấm **SNAPSHOT** để ghi lại các mốc thời gian. Sau khi dừng đồng hồ lại, bạn có thể xem lại lần lượt các mốc thời gian thứ 1, 2, 3 mà bạn đã ghi lại.

bảo mật

tính năng

mô tả

SIM PIN

Khóa hoặc mở khóa thẻ SIM:

 > Settings > Security > SIM PIN

Cảnh báo: Nếu nhập mã số PIN sai liên tiếp 3 lần, thẻ SIM sẽ bị khóa và máy hiển thị câu **SIM Blocked**.

khóa máy điện thoại

 > Settings > Security > Phone Lock

Chọn để khóa ngay máy điện thoại hoặc để mở/tắt chức năng tự động khóa **Automatic Lock**.

tính năng	mô tả
thêm tiếp đầu ngữ	Chức năng Easy Prefix là tiện ích giúp bạn cài đặt Auto Change để chọn nhà cung cấp dịch vụ ưa thích.

tính năng	mô tả
chơi trò chơi	 > Game 

trò chơi & giải trí

tính năng	mô tả
quản lý hình ảnh	Để quản lý hình ảnh và hoạt hình:  > Multimedia > Pictures
quản lý đoạn nhạc	Quản lý các tiếng chuông hoặc bài hát mà bạn đã soạn hoặc tải về:  > Multimedia > Sounds
chạy trình duyệt	 > Web Access > Start Browser 

Độ hấp thu sóng điện từ - SAR

Kiểu điện thoại này phù hợp với các yêu cầu quốc tế về sự tiếp xúc với sóng vô tuyến.

Máy điện thoại của bạn là một thiết bị thụ phát sóng vô tuyến. Nó được thiết kế và chế tạo nhằm không vượt quá giới hạn về sự tiếp xúc với năng lượng sóng điện từ theo các tiêu chuẩn quốc tế. Các tiêu chuẩn này được phát triển bởi tổ chức khoa học độc lập ICNIRP và có một mức độ an toàn dự phòng đủ để an toàn cho tất cả mọi người, bất kể tuổi tác và tình trạng sức khỏe.

Tiêu chuẩn tiếp xúc với năng lượng sóng điện từ dùng trong máy điện thoại di động được đo bởi một đơn vị tính gọi là SAR (Specific Absorption Rate). Kiểu máy điện thoại của bạn có giới hạn ICNIRP SAR là 2 W/kg và giá trị lớn nhất cho loại điện thoại này đo được ở tai là 0,63 W/kg¹. Máy điện thoại này có nhiều chức năng khác nhau và được dùng ở nhiều vị trí khác nhau, như đeo trên người như mô tả trong hướng dẫn này². Khi đó, giá trị SAR cao nhất đã đo được là 0,22 W/kg¹.

Mặc dù SAR được xác định khi máy hoạt động với công suất cao nhất, mức độ SAR thực tế thường thấp hơn nhiều giá trị tối đa. Đó là vì máy điện thoại được thiết kế để hoạt động ở nhiều công suất khác nhau nhưng thực tế nó chỉ dùng công suất cần thiết để kết nối với mạng di động.

Các giá trị SAR có khác nhau với nhiều loại điện thoại, khi đeo ở nhiều vị trí khác nhau nhưng tất cả đều phù hợp với các qui định của chính phủ về sự an toàn cho việc sự tiếp xúc với năng lượng sóng điện từ. Cần lưu ý rằng sự cải tiến về công nghệ điện thoại di động có thể làm cho các giá trị SAR ở mỗi loại máy khác nhau, nhưng chúng đều tuân thủ các qui định chung.

Tổ chức Y tế Thế giới đã tuyên bố rằng các thông tin khoa học không yêu cầu cần phải có bất kỳ một sự can thiệp đặc biệt nào khi sử dụng máy điện thoại di động. Họ chỉ ra rằng nếu bạn muốn giảm sự tiếp xúc với năng lượng sóng điện từ, bạn cần giới hạn thời gian nói chuyện điện thoại hoặc dùng thiết bị rảnh tay để giữ máy điện thoại ở xa đầu và cơ thể.

Các thông tin khác được nêu ở trang web của Tổ chức Y tế Thế giới (<http://www.who.int/emf>) hoặc của Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. Việc kiểm tra được thực hiện đúng theo tiêu chuẩn quốc tế về kiểm nghiệm. Tiêu chuẩn này đã bao gồm phần dự phòng đủ an toàn cho mọi người và bù trừ cho các sai lệch khi đo. Các thông tin khác có liên quan bao gồm phương pháp kiểm tra của Motorola, thủ tục kiểm tra và dung sai đo lường cho loại sản phẩm này.
2. Vui lòng xem thêm chương *An toàn và Thông tin chung*, mục đeo máy điện thoại.

Thông tin từ Tổ chức Y tế Thế giới - WHO

Các thông tin khoa học hiện tại không cho rằng phải có bất kỳ sự đề phòng nào về việc sử dụng máy điện thoại di động. Nếu bạn không an tâm, hãy giới hạn sự tiếp xúc với sóng điện từ cho bạn và cho trẻ em bằng cách giảm thời gian gọi điện thoại hoặc sử dụng các thiết bị rảnh tay để giữ máy điện thoại di động ở xa đầu và cơ thể.

Nguồn: WHO Fact Sheet 193

Xem thêm thông tin tại: <http://www.who.int./peh-emf>

chỉ mục

A

âm lượng chuông 64
âm lượng tiếng bấm bàn
 phím 64
ăng ten 9
an toàn 8

B

bắt đầu tán gẫu 63
biểu tượng 12
biểu tượng 32
bị hóc 13
bộ sạc 12

C

cài đặt kiểu nhập liệu 37
cài đặt lại tất cả 65
cài đặt mạng di động 68
cài đặt máy điện thoại 42
cài đặt đài FM 28
cài đặt nhắc báo 69
cài đặt đồng hồ đo cước
 phí 67
các chức năng chính 31
chạy trình duyệt 63, 71
chế độ chờ 31, 48
chơi trò chơi 71
chọn chức năng 36

chọn giá trị 36
chuyển cuộc gọi 53
chuyển vùng 33
cổng cắm bộ sạc 1
cổng cắm tai nghe 1
cường độ sóng 32
cước phí 67
cuộc gọi đang chờ 48
cuộc gọi vừa qua 46

D

danh bạ điện thoại 55
danh mục 35
danh mục phụ 31

dữ liệu 32
dò sóng 27
đài FM 26
đèn nền 44
đồng hồ đo cước phí 67
đồng hồ đo cuộc gọi 67
đồng hồ trong cuộc gọi
67
đường dây đang dùng 33

G

giải trí 71
giờ 43
gọi khẩn cấp 49
gọi lại cho một số điện
thoại 47
gọi điện thoại 21, 57
gọi quốc tế 50

gửi mẫu tin nhắn đa
phương tiện 61
gửi mẫu tin nhắn 60
gửi tin nhắn 60
gửi tin nhắn đa phương
tiện 22, 60
GPRS 32

H

hiển thị đồng hồ 64
hình nền 43
hội đàm 53
hộp thư thoại 51

K

kết thúc cuộc tán gẫu 63
khóa chương trình 70
kiểu nhập liệu 37

kiểu nhập liệu itap 38
kiểu nhập liệu tap 38

L

lắp pin 18
loa ngoài rảnh tay 40
lịch 69
lưu ý 11

M

mật mã 41
mạng di động 68
mã khóa 41
mã số PIN 70
màn hình 31
màn hình hiển thị 44
máy chụp ảnh 24
máy hồng 12

máy điều hoà tim 10
máy tính 69
mở khóa thẻ SIM 70

N

ngăn chặn cuộc gọi 54
ngày 43
nghe lời nhắn 51
nhận đề nghị tán gẫu 63
nhận tin nhắn đa phương
tiện 23
nhập biểu tượng 39
nhập liệu 37
nhập số 39
nhắc nhở 14
nhiều sóng điện từ 9

P

phân nhóm số điện thoại
58
phím âm lượng 1
phím di chuyển 1
phím di chuyển 40
phím gọi 1
phím mềm 31
phím mềm phải 1
phím mềm trái 1
phím menu 1
phím mở / tắt 1
phím nhắn tin 1
phím tắt 65
phụ kiện chọn thêm 17
phụ thuộc vào mạng di
động 17
pin 12, 18

Q

quản lý hình ảnh 71
quản lý thông tin cá nhân
69
quay số bằng một phím
bấm 50
quay số cố định 54, 55
quay số nhanh 53
quên các mật mã khác 41
quên mã mở khóa 41
qui đổi tiền tệ 69

S

sạc pin 19
sách hướng dẫn 17
số của người gọi 49
sổ ghi 48
số điện thoại của bạn 21

sử dụng pin 12
sử dụng và bảo quản 15
sóng vô tuyến 8

T

tắt nhắc báo 69
tạo mục từ mới 55
tái chế 17
tán gẫu 24, 63
thay đổi phím mềm và
biểu tượng 65
thẻ SIM 18
thẻ SIM bị khóa 21, 70
thiết bị trợ thính 10
thiết bị y tế 10
thính lực 14
thư thoại 51
thời gian gọi 67

thời gian kết nối 67
tin nhắn 33, 60
tin nhắn đa phương tiện
22

tính năng cơ bản 17
tính năng khác 53
tính năng nổi bật 22
tính năng rảnh tay 68
tính năng về cuộc gọi 46
tổ chức y tế thế giới 73
trả lời cuộc gọi 21, 44, 47
trò chơi 71

U

USB 29

X

xem danh bạ theo nhóm
58
xem tin nhắn 61
xóa tất cả 66



MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark office.
All other products or service names are the property of their respective owners.
The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license.
© Motorola, Inc. 2006

Specifications are subject to change without notice

Part No: 6802925J24